G1000® Integrated Flight Deck

Cockpit Reference Guide for the Cessna Corvalis/Corvalis TT

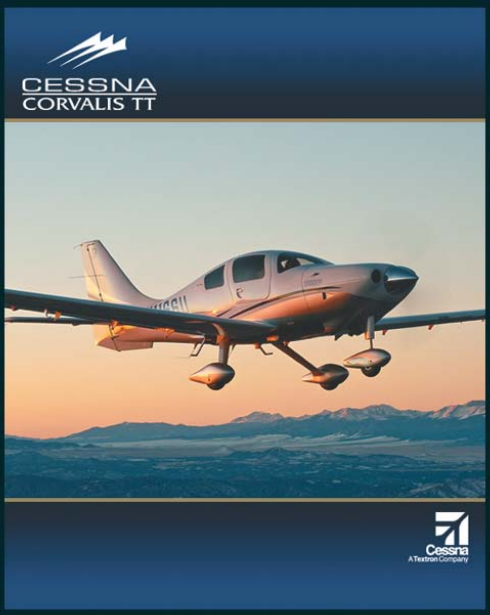

GARMIN®

FLIGHT INSTRUMENTS
ENGINE INDICATION SYSTEM
NAV/COM/TRANSPONDER/AUDIO PANEL
AUTOMATIC FLIGHT CONTROL SYSTEM
GPS NAVIGATION
FLIGHT PLANNING
PROCEDURES
HAZARD AVOIDANCE
ADDITIONAL FEATURES
ABNORMAL OPERATION
ANNUNCIATIONS & ALERTS
APPENDIX
INDEX

Copyright © 2006-2010, 2012 Garmin Ltd. or its subsidiaries. All rights reserved.

This manual reflects the operation of System Software version 0534.18 or later for the Cessna Corvalis/Corvalis TT. Some differences in operation may be observed when comparing the information in this manual to earlier or later software versions.

Garmin International, Inc., 1200 East 151st Street, Olathe, Kansas 66062, U.S.A.
Tel: 913/397.8200 Fax: 913/397.8282

Garmin AT, Inc., 2345 Turner Road SE, Salem, OR 97302, U.S.A.
Tel: 503/391.3411 Fax 503/364.2138

Garmin (Europe) Ltd, Liberty House, Bulls Copse Road, Hounsdown Business Park, Southampton, SO40 9RB, U.K.
Tel: 44/0870.8501241 Fax: 44/0870.8501251

Garmin Corporation, No. 68, Jangshu 2nd Road, Shijr, Taipei County, Taiwan
Tel: 886/02.2642.9199 Fax: 886/02.2642.9099

For after-hours emergency, aircraft on ground (AOG) technical support for Garmin panel mount and integrated avionics systems, please contact Garmin's AOG Hotline at 913.397.0836.

Web Site Address: www.garmin.com

Except as expressly provided herein, no part of this manual may be reproduced, copied, transmitted, disseminated, downloaded or stored in any storage medium, for any purpose without the express written permission of Garmin. Garmin hereby grants permission to download a single copy of this manual and of any revision to this manual onto a hard drive or other electronic storage medium to be viewed for personal use, provided that such electronic or printed copy of this manual or revision must contain the complete text of this copyright notice and provided further that any unauthorized commercial distribution of this manual or any revision hereto is strictly prohibited.

Garmin® and G1000® are registered trademarks of Garmin Ltd. or its subsidiaries. FliteCharts® and SafeTaxi® are trademarks of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin.

NavData® is a registered trademark of Jeppesen, Inc.; Stormscope® is a registered trademark of L-3 Communications.

SiriusXM Weather and SiriusXM Satellite Radio are provided by SiriusXM Satellite Radio, Inc.

AOPA Membership Publications, Inc. and its related organizations (hereinafter collectively "AOPA") expressly disclaim all warranties, with respect to the AOPA information included in this data, express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. The information is provided "as is" and AOPA does not warrant or make any representations regarding its accuracy, reliability, or otherwise.

Under no circumstances including negligence, shall AOPA be liable for any incidental, special or consequential damages that result from the use or inability to use the software or related documentation, even if AOPA or an AOPA authorized representative has been advised of the possibility of such damages. User agrees not to sue AOPA and, to the maximum extent allowed by law, to release and hold harmless AOPA from any causes of action, claims or losses related to any actual or alleged inaccuracies in the information. Some jurisdictions do not allow the limitation or exclusion of implied warranties or liability for incidental or consequential damages so the above limitations or exclusions may not apply to you.

AC-U-KWIK and its related organizations (hereafter collectively "AC-U-KWIK Organizations") expressly disclaim all warranties with respect to the AC-U-KWIK information included in this data, express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. The information is provided "as is" and AC-U-KWIK Organizations do not warrant or make any representations regarding its accuracy, reliability, or otherwise. Licensee agrees not to sue AC-U-KWIK Organizations and, to the maximum extent allowed by law, to release and hold harmless AC-U-KWIK Organizations from any cause of action, claims or losses related to any actual or alleged inaccuracies in the information arising out of Garmin's use of the information in the datasets. Some jurisdictions do not allow the limitation or exclusion of implied warranties or liability for incidental or consequential damages so the above limitations or exclusions may not apply to licensee.

August, 2012 190-00567-05 Rev. A Printed in the U.S.A.

WARNING: *Navigation and terrain separation must NOT be predicated upon the use of the terrain avoidance feature. The terrain avoidance feature is NOT intended to be used as a primary reference for terrain avoidance and does not relieve the pilot from the responsibility of being aware of surroundings during flight. The terrain avoidance feature is only to be used as an aid for terrain avoidance. Terrain data is obtained from third party sources. Garmin is not able to independently verify the accuracy of the terrain data.*

WARNING: *The displayed minimum safe altitudes (MSAs) are only advisory in nature and should not be relied upon as the sole source of obstacle and terrain avoidance information. Always refer to current aeronautical charts for appropriate minimum clearance altitudes.*

WARNING: *Do not use outdated database information. Databases used in the G1000 system must be updated regularly in order to ensure that the information remains current. Pilots using any outdated database do so entirely at their own risk.*

WARNING: *Do not use basemap (land and water data) information for primary navigation. Basemap data is intended only to supplement other approved navigation data sources and should be considered as an aid to enhance situational awareness.*

WARNING: *Traffic information shown on system displays is provided as an aid in visually acquiring traffic. Pilots must maneuver the aircraft based only upon ATC guidance or positive visual acquisition of conflicting traffic.*

WARNING: *Do not rely on information from the lightning detection system display as the sole basis for hazardous weather avoidance. Range limitations and interference may cause the system to display inaccurate or incomplete information. Refer to documentation from the lightning detection system manufacturer for detailed information about the system.*

WARNING: *Do not use data link weather information for maneuvering in, near or around areas of hazardous weather. Information contained within data link weather products may not accurately depict current weather conditions.*

WARNING: *Do not use the indicated data link weather product age to determine the age of the weather information shown by the data link weather product. Due to time delays inherent in gathering and processing weather data for data link transmission, the weather information shown by the data link weather product may be significantly older than the indicated weather product age.*

WARNING: *The Garmin G1000, as installed in the Cessna Corvalis/Corvalis TT aircraft, has a very high degree of functional integrity. However, the pilot must recognize that providing monitoring and/or self-test capability for all conceivable system failures is not practical. Although unlikely, it may be possible for erroneous operation to occur without a fault indication shown by the G1000. It is thus the responsibility of the pilot to detect such an occurrence by means of cross-checking with all redundant or correlated information available in the cockpit.*

WARNING: *For safety reasons, G1000 operational procedures must be learned on the ground.*

WARNING: *The United States government operates the Global Positioning System and is solely responsible for its accuracy and maintenance. The GPS system is subject to changes which could affect the accuracy and performance of all GPS equipment. Portions of the Garmin G1000 utilize GPS as a precision electronic NAVigation AID (NAVAID). Therefore, as with all NAVAIDs, information presented by the G1000 can be misused or misinterpreted and, therefore, become unsafe.*

WARNING: *To reduce the risk of unsafe operation, carefully review and understand all aspects of the G1000 Pilot's Guide documentation and the Cessna Corvalis/Corvalis TT Pilot's Operating Handbook (POH). Thoroughly practice basic operation prior to actual use. During flight operations, carefully compare indications from the G1000 to all available navigation sources, including the information from other NAVAIDs, visual sightings, charts, etc. For safety purposes, always resolve any discrepancies before continuing navigation.*

WARNING: *The illustrations in this guide are only examples. Never use the G1000 to attempt to penetrate a thunderstorm. Both the FAA Advisory Circular, Subject: Thunderstorms, and the Aeronautical Information Manual (AIM) recommend avoiding "by at least 20 miles any thunderstorm identified as severe or giving an intense radar echo."*

WARNING: *Lamp(s) inside this product may contain mercury (HG) and must be recycled or disposed of according to local, state, or federal laws. For more information, refer to our website at www.garmin.com/aboutGarmin/environment/disposal.jsp.*

WARNING: *Because of variation in the earth's magnetic field, operating the system within the following areas could result in loss of reliable attitude and heading indications. North of 72° North latitude at all longitudes. South of 70° South latitude at all longitudes. North of 65° North latitude between longitude 75° W and 120° W. (Northern Canada). North of 70° North latitude between longitude 70° W and 128° W. (Northern Canada). North of 70° North latitude between longitude 85° E and 114° E. (Northern Russia). South of 55° South latitude between longitude 120° E and 165° E. (Region south of Australia and New Zealand).*

WARNING: *Do not use GPS to navigate to any active waypoint identified as a 'NON WGS84 WPT' by a system message. 'NON WGS84 WPT' waypoints are derived from an unknown map reference datum that may be incompatible with the map reference datum used by GPS (known as WGS84) and may be positioned in error as displayed.*

CAUTION: *The PFD and MFD displays use a lens coated with a special anti-reflective coating that is very sensitive to skin oils, waxes, and abrasive cleaners. CLEANERS CONTAINING AMMONIA WILL HARM THE ANTI-REFLECTIVE COATING. It is very important to clean the lens using a clean, lint-free cloth and an eyeglass lens cleaner that is specified as safe for anti-reflective coatings.*

CAUTION: *The Garmin G1000 does not contain any user-serviceable parts. Repairs should only be made by an authorized Garmin service center. Unauthorized repairs or modifications could void both the warranty and the pilot's authority to operate this device under FAA/FCC regulations.*

NOTE: *All visual depictions contained within this document, including screen images of the G1000 panel and displays, are subject to change and may not reflect the most current G1000 system and aviation databases. Depictions of equipment may differ slightly from the actual equipment.*

NOTE: *This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.*

NOTE: *Do not rely solely upon data link services to provide Temporary Flight Restriction (TFR) information. Always confirm TFR information through official sources such as Flight Service Stations or Air Traffic Control.*

NOTE: *The data contained in the terrain and obstacle databases comes from government agencies. Garmin accurately processes and cross-validates the data, but cannot guarantee the accuracy and completeness of the data.*

NOTE: *This product, its packaging, and its components contain chemicals known to the State of California to cause cancer, birth defects, or reproductive harm. This notice is being provided in accordance with California's Proposition 65. If you have any questions or would like additional information, please refer to our web site at www.garmin.com/prop65.*

NOTE: *Interference from GPS repeaters operating inside nearby hangars can cause an intermittent loss of attitude and heading displays while the aircraft is on the ground. Moving the aircraft more than 100 yards away from the source of the interference should alleviate the condition.*

NOTE: *Use of polarized eyewear may cause the flight displays to appear dim or blank.*

NOTE: *The purpose of this Cockpit Reference Guide is to provide th e pilot a resource with which to find operating instructions on the major features of the G1000 system more easily. It is not intended to be a comprehensive operating guide. Complete operating procedures for the system are found in the G1000 Pilot's Guide for this aircraft.*

Part Number	Change Summary
190-00567-00 Rev A Rev B	 Production release Added C350 parameters, TAWS changes, and Stormscope.
190-00567-01 Rev A Rev B	 Added GDU 8.10 parameters, WAAS, VNAV, Airways, and Charts Changed company references to Cessna
190-00567-02	Reformatted manual Added GDU 9.03 parameters
190-00567-03	Added GDU 9.05 with Synthethic Vision System (SVS) Removed Stormscope
190-00567-04	Added Tach Timer Added Flight Plan Import/Export Added AOPA Airport Directory Added Auxiliary Video Added temporary user waypoints Added CDI availability during Dead Reckoning mode Added new MFD page navigation Added other GDU 10.01 parameters
190-00567-05	Updated to GDU 12.03 parameters Added METAR, STRMSCP, and weather LEGEND softkey functions Added Profile View Added AC-U-KWIK Airport Directory Added MV DB update procedure Added Stormscope Added flight plan enhancements Updated weather legend Updated database procedures Updated message advisories

Revision	Date of Revision	Affected Pages	Description
A	August, 2012	All	Production Release

Blank Page

FLIGHT INSTRUMENTS 1
- Selecting the Altimeter Barometric Pressure Setting 1
- Selecting Standard Barometric Pressure (29.92 in Hg) 1
- Change Altimeter Barometric Pressure Setting Units 1
- Change Altimeter and Selected Altitude Display Units 1
- Change Navigation Sources 2
- Enable/Disable OBS Mode While Navigating with GPS 2
- Generic Timer 2
- Configure Vspeed Bugs 2
- Set Barometric Minimum Descent Altitude 3
- Displaying Wind Data 3
- Changing HSI Format 3

ENGINE INDICATION SYSTEM 5
- Engine Page 6
- Engine Leaning Assist Mode 10

NAV/COM/TRANSPONDER/AUDIO PANEL 13
- ADF Tuning (Optional) 13
- DME Tuning (Optional) 13
- Enter a Transponder Code 13
- Selecting a COM Radio 14
- Selecting a NAV Radio 14
- NAV/COM Tuning 14
- Split COM 14
- Digital Clearance Recorder and Player 15
- Intercom System (ICS) Isolation 15

GFC 700 AUTOMATIC FLIGHT CONTROL SYSTEM 17
- Flight Director Activation 17
- Vertical Modes 18
- Lateral Modes 19

GPS NAVIGATION 21
- Direct-to Navigation 21
- Activate a Stored Flight Plan 22
- Activate a Flight Plan Leg 22
- Stop Navigating a Flight Plan 23
- Vertical Navigation (VNAV) 23

FLIGHT PLANNING 25
- Trip Planning 25
- Create a User Waypoint Defined by Latitude & Longitude 27
- Create a User Waypoint Defined by Radials from Other Waypoints 27

Create a User Waypoint Defined by a Radial & Distance from Another Waypoint .. 29
Create a User Waypoint using the Map Pointer .. 30
Delete a User Waypoint .. 31
Create a Flight Plan .. 32
Import a Flight Plan from an SD Card .. 33
Insert a Waypoint in the Active Flight Plan .. 33
Enter an Airway in a Flight Plan .. 34
Invert An Active Flight Plan .. 35
Remove a Departure, Arrival, Approach, or Airway from a Flight Plan .. 35
Store a Flight Plan .. 35
Edit a Stored Flight Plan .. 36
Delete a Waypoint from the Flight Plan .. 36
Invert and Activate a Stored Flight Plan .. 36
Copy a Flight Plan .. 37
Delete a Flight Plan .. 37
Graphical Flight Plan Creation .. 38
Export a Flight Plan to an SD Card .. 38

PROCEDURES .. 39
Load and Activate a Departure Procedure .. 39
Activate A Departure Leg .. 39
Load An Arrival Procedure .. 40
Activate An Arrival Leg .. 40
Load and/or Activate an Approach Procedure .. 41
Activate An Approach in the Active Flight Plan .. 42
Activate a Vector to Final Approach Fix .. 42
Activate A Missed Approach in the Active Flight Plan .. 42

HAZARD AVOIDANCE .. 43
Customizing the Hazard Displays on the Navigation Map .. 43
STORMSCOPE® (Optional) .. 43
SiriusXM Weather (Optional) .. 45
Traffic Systems .. 47
Terrain And Obstacle Proximity .. 49
Terrain-SVS .. 50
Terrain Awareness & Warning System (TAWS) Display (Optional) .. 52

ADDITIONAL FEATURES .. 55
Synthetic Vision (Optional) .. 55
Terminal Procedure Charts .. 56
Airport Directory .. 58
SiriusXM Radio Entertainment .. 59
Auxiliary Video (Optional) .. 61
Electronic Checklists .. 63

ABNORMAL OPERATION 65
- **Reversionary Mode** 65
- **Abnormal COM Operation** 65
- **Audio Panel Fail-safe Operation** 65
- **Hazard Displays with Loss of GPS Position** 65
- **Unusual Attitudes** 66
- **Dead Reckoning** 66

ANNUNCIATIONS & ALERTS 69
- **G1000 System Annunciations** 69
- **WARNING Alerts** 71
- **CAUTION Alerts** 71
- **Annunciation Advisory** 72
- **Message Advisory Alerts** 72
- **CO Guardian Messages** 72
- **AFCS Alerts** 73
- **Terrain-SVS Alerts** 74
- **Terrain-SVS System Status Annunciations** 74
- **TAWS-B Alerts** 75
- **Voice Alerts** 78
- **MFD & PFD Message Advisories** 78
- **Database Message Advisories** 79
- **GMA 1347 Message Advisories** 83
- **GIA 63 Message Advisories** 83
- **GIA 63W Message Advisories** 86
- **GEA 71 Message Advisories** 90
- **GTX 33 Message Advisories** 90
- **GRS 77 Message Advisories** 91
- **GMU 44 Message Advisories** 91
- **GDL 69A Message Advisories** 92
- **GDC 74A Message Advisories** 92
- **GCU 476 Message Advisories** 92
- **Miscellaneous Message Advisories** 93
- **Flight Plan Import/Export Messages** 97

APPENDIX 99
- **PFD Softkey Map** 99
- **MFD Softkey Map** 105
- **Loading Updated Databases** 107

INDEX Index-1

Blank Page

FLIGHT INSTRUMENTS

SELECTING THE ALTIMETER BAROMETRIC PRESSURE SETTING

Turn the **BARO** Knob to select the desired setting.

SELECTING STANDARD BAROMETRIC PRESSURE (29.92 IN HG)

1) Select the **PFD** Softkey.
2) Select the **STD BARO** Softkey to set standard barometric pressure.

CHANGE ALTIMETER BAROMETRIC PRESSURE SETTING UNITS

1) Select the **PFD** Softkey to display the second-level softkeys.
2) Select the **ALT UNIT** Softkey.
3) Select the **IN** Softkey to display the barometric pressure setting in inches of mercury (in Hg).

   Or:

   Select the **HPA** Softkey to display the barometric pressure setting in hectopascals.
4) Select the **BACK** Softkey to return to the top-level softkeys.

CHANGE ALTIMETER AND SELECTED ALTITUDE DISPLAY UNITS

1) Select the **PFD** Softkey to display the second-level softkeys.
2) Select the **ALT UNIT** Softkey.
3) Select the **METERS** Softkey to add or remove the metric units display for the altimeter and selected altitude.
4) Select the **BACK** Softkey to return to the top-level softkeys.

CHANGE NAVIGATION SOURCES

1) Select the **CDI** Softkey to change from GPS to VOR1 or LOC1. This places the light blue tuning box over the NAV1 standby frequency in the upper left corner of the PFD.
2) Select the **CDI** Softkey again to change from VOR1 or LOC1 to VOR2 or LOC2. This places the light blue tuning box over the NAV2 standby frequency.
3) Select the **CDI** Softkey a third time to return to GPS.

ENABLE/DISABLE OBS MODE WHILE NAVIGATING WITH GPS

1) Select the **OBS** Softkey to select OBS Mode.
2) Turn a **CRS** Knob to select the desired course to/from the waypoint. Press a **CRS** Knob to synchronize the Selected Course with the bearing to the next waypoint.
3) Select the **OBS** Softkey again to disable OBS Mode.

GENERIC TIMER

1) Select the **TMR/REF** Softkey, then turn the large **FMS** Knob to select the time field (hh/mm/ss). Turn the **FMS** Knobs to set the desired time, then press the **ENT** Key. The UP/DOWN field is now highlighted.
2) Turn the small **FMS** Knob to display the UP/DOWN window. Turn the **FMS** Knob to select 'UP' or 'DOWN', then press the **ENT** Key. 'START?' is now highlighted.
3) Press the **ENT** Key to START, STOP, or RESET the timer (if the timer is counting DOWN, it starts counting UP after reaching zero). Press the **CLR** Key or the **TMR/REF** Softkey to remove the window.

CONFIGURE VSPEED BUGS

1) Select the **TMR/REF** Softkey.
2) Turn the large **FMS** Knob to highlight the desired Vspeed.
3) Use the small **FMS** Knob to change the Vspeed in 1-kt increments (when a speed has been changed from a default value, an asterisk appears next to the speed).

4) Press the **ENT** Key or turn the large **FMS** Knob to highlight the ON/OFF field
5) Turn the small **FMS** Knob clockwise to ON or counterclockwise to OFF.
6) To remove the window, press the **CLR** Key or the **TMR/REF** Softkey.

SET BAROMETRIC MINIMUM DESCENT ALTITUDE

1) Select the **TMR/REF** Softkey.
2) Turn the large **FMS** Knob to highlight the OFF/BARO field to the right of 'MINIMUMS'.
3) Turn the small **FMS** Knob clockwise to BARO.
4) Press the **ENT** Key.
5) Use the small **FMS** Knob to enter the desired altitude.
6) Press the **ENT** Key.
7) To remove the window, press the **CLR** Key or select the **TMR/REF** Softkey.

DISPLAYING WIND DATA

1) Select the **PFD** Softkey.
2) Select the **WIND** Softkey to display wind data to the left of the HSI.
3) Select one of the **OPTN** softkeys to change how wind data is displayed.
4) To remove the Wind Data Window, select the **OFF** Softkey.

CHANGING HSI FORMAT

1) Select the **PFD** Softkey.
2) Select the **HSI FRMT** Softkey.
3) Select the **360 HSI** Softkey to display the full size HSI.

   Or:

   Select the **ARC HSI** Softkey to display the arc style HSI.

Blank Page

ENGINE INDICATION SYSTEM

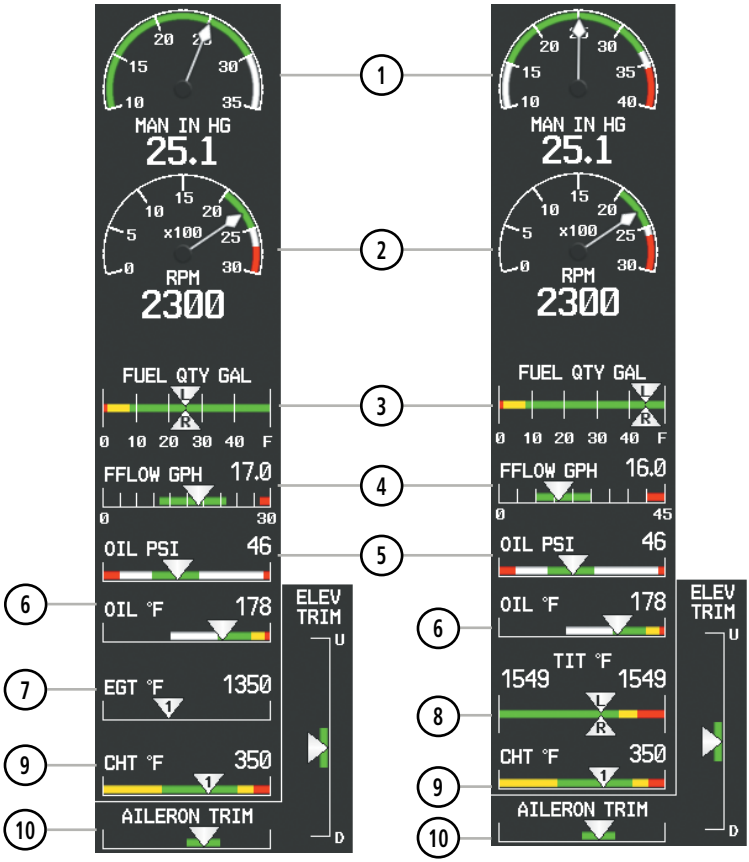

Corvalis *Corvalis TT*

EIS Display

1. *Engine Manifold Pressure Gauge*
2. *Tachometer*
3. *Fuel Quantity Indicator*
4. *Fuel Flow Indicator*
5. *Oil Pressure Indicator*
6. *Oil Temperature Indicator*
7. *Exhaust Gas Temperature Indicator (Corvalis only)*
8. *Turbine Inlet Temperature Indicator (Corvalis TT only)*
9. *Cylinder Head Temperature Indicator*
10. *Trim Group*

ENGINE PAGE

Selecting the **SYSTEM** Softkey on the MFD accesses the Engine Page, which displays all Engine Indication System instruments; selecting the softkey again exits the Engine Page.

Oxygen quantity and outlet pressure are also shown on the Engine Page. The **OXYGEN** Softkey can be used to turn the optional oxygen system on/off. If an oxygen system is not installed, blank gauges are displayed.

Engine Page (Corvalis)

1. *Oil Temperature/Pressure Gauge*
2. *Engine Manifold Pressure Gauge*
3. *Tachometer*
4. *Fuel Calculations Group*
5. *Oxygen Quantity Gauge (Corvalis TT only)*
6. *Oxygen Outlet Pressure Gauge (Low Pressure Gauge shown, High Pressure Gauge optional) (Corvalis TT only)*
7. *Electrical Group*
8. *Trim Group*
9. *Engine Temperature Group*
10. *Fuel Quantity Gauges*
11. *Fuel Flow Gauge*

Engine Page (Corvalis TT)

Carbon Monoxide Detection

If carbon monoxide (CO) in the cabin becomes too high (exceeds 50 ppm), a flashing red annunciation and the current level of CO in parts per million (ppm) are displayed in the lower right corner of the Engine Page.

When a warning is generated, the **CO RST** Softkey becomes available to reset the CO Guardian and acknowledge the alert.

Fuel Calculations Group

NOTE: *Fuel calculations do not use the aircraft fuel quantity indicators and are calculated from the last time the fuel was reset.*

Fuel used (GAL USED), endurance (ENDUR), and range (RANGE NM) are all calculated based on the displayed fuel remaining (GAL REM) and the fuel flow totalizer. The fuel remaining can be adjusted using the following softkeys:

- **DEC FUEL** – Decreases totalizer-based fuel remaining in one-gallon increments
- **INC FUEL** – Increases totalizer-based fuel remaining in one-gallon increments
- **RST FUEL** – Resets totalizer-based fuel remaining to the aircraft's fuel capacity (98 gal or 102 gal usable) and sets the GAL USED display to zero

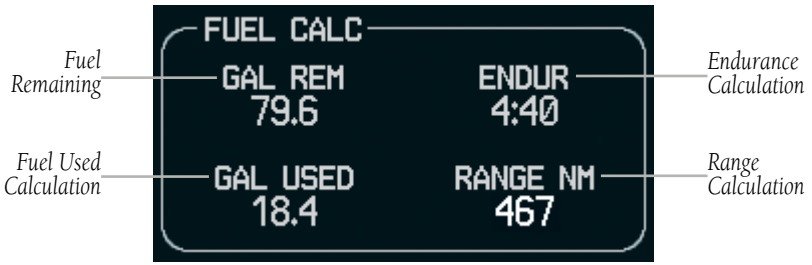

Fuel Calculations Group

Engine Temperature Group

The temperature group displays the Cylinder Head Temperature (CHT) and Exhaust Gas Temperature (EGT) in degrees Fahrenheit for each cylinder using bar graphs and digital readouts. For the Corvalis TT, Turbine Inlet Temperature (TIT) is shown on a sliding bar scale.

The following softkeys can be used to modify the display of engine temperature information:

- **DCLTR** – Removes/displays the EGT and CHT readouts from the display
- **ASSIST** – Accesses the Engine Leaning Assist Mode

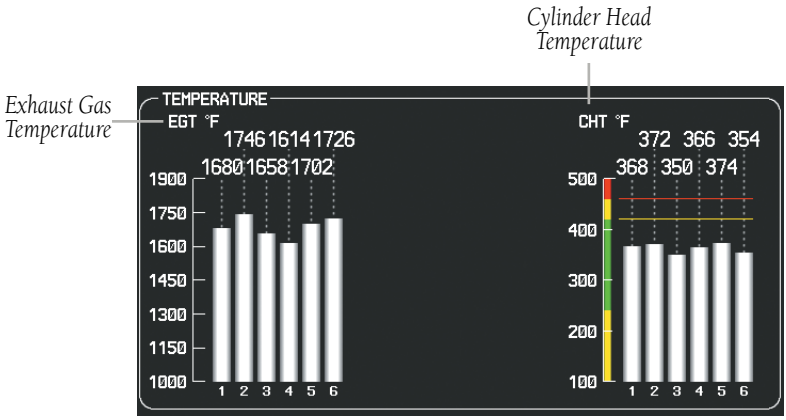

Engine Temperature Group (Corvalis)

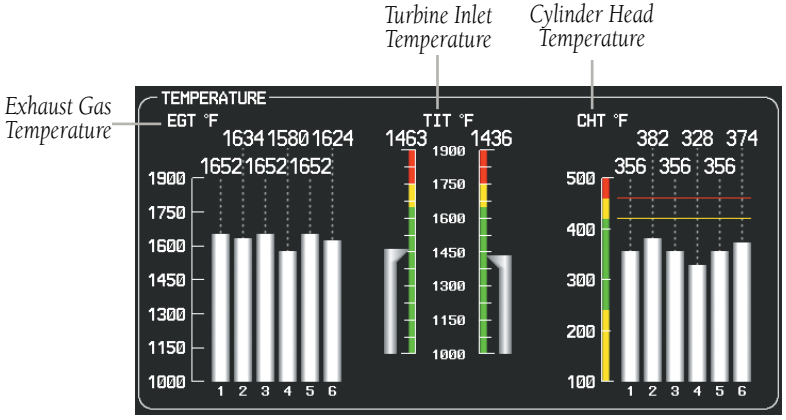

Engine Temperature Group (Corvalis TT)

ENGINE LEANING ASSIST MODE

NOTE: *Consult the Cessna Corvalis/Corvalis TT Aircraft Flight Manual (AFM) for leaning procedures.*

From the Engine Page, the Engine Leaning Assist Mode may be accessed by selecting the **ASSIST** Softkey. Selecting the **ASSIST** Softkey again returns the MFD to the Engine Page. Use the **SYSTEM** Softkey to exit the Engine Page.

While in Assist Mode, the EIS Display is shown along with the Fuel Flow Gauge and an expanded Engine Temperature Group.

Corvalis

When the **ASSIST** Softkey is selected, the system initially highlights the number and EGT readout of the cylinder with the hottest EGT.

Engine Leaning Assist Mode (Corvalis)

When the first peak is detected, the cylinder numbers disappear, "1st" is annunciated in light blue below that cylinder's EGT bar, the temperature is marked in light blue on the graph, and the EGT readout is outlined.

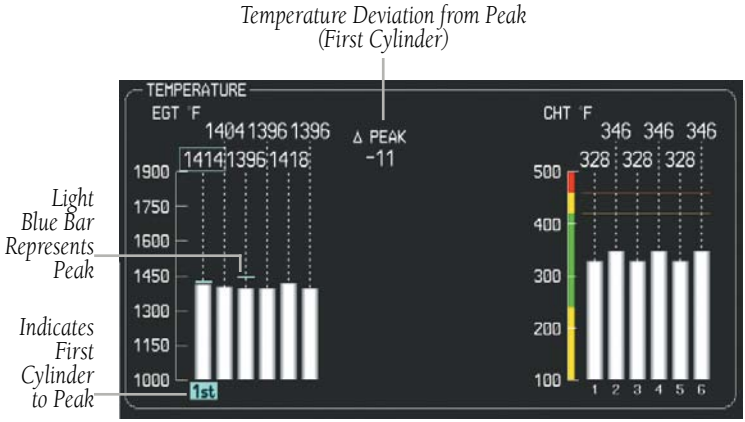

Assist Mode - First Peaked Cylinder (Corvalis)

The system continues to detect peak EGTs for each cylinder as the fuel flow is decreased and the peak of each cylinder's EGT is indicated by a light blue marker. The last cylinder to peak is denoted by the "Last" annunciation below its bar on the graph and the EGT readout is outlined in light blue.

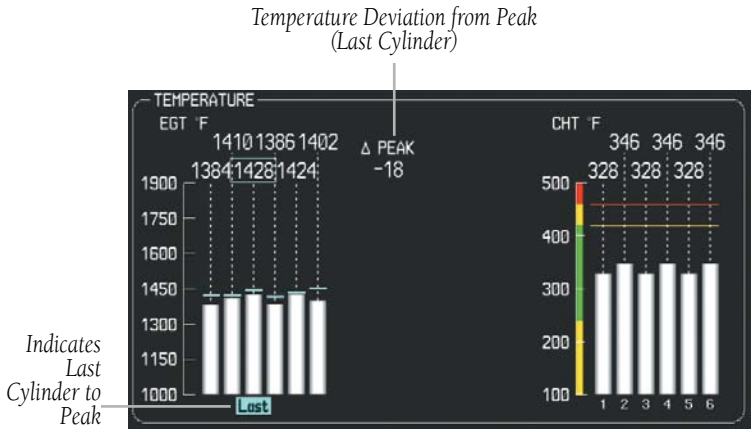

Assist Mode - Last Peaked Cylinder (Corvalis)

Corvalis TT

Once the **ASSIST** Softkey is selected, the peak of each TIT is indicated by a light blue bar which moves and remains at the peak Turbine Inlet Temperature.

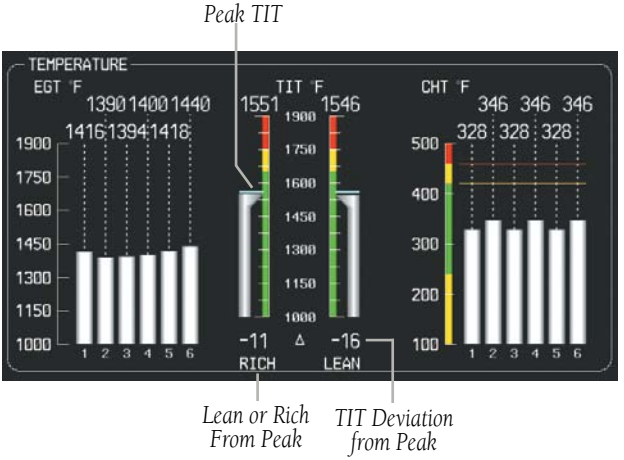

Engine Leaning Assist Mode (Corvalis TT)

NAV/COM/TRANSPONDER/AUDIO PANEL

ADF TUNING (OPTIONAL)

1) Select the **ADF/DME** Softkey.
2) Turn the small **FMS** Knob to enter the first digit of the desired ADF frequency.
3) Turn the large **FMS** Knob to select the next desired field.
4) Turn the small **FMS** Knob to enter the desired number.
5) Repeat steps 3 and 4 until the desired ADF frequency is entered.
6) Press the **ENT** Key to accept the new frequency.
7) Press the **ENT** Key again to transfer the frequency to the active field.
8) Turn the large **FMS** Knob to select the MODE field.
9) Turn the small **FMS** Knob to select ANT, ADF, ADF/BFO, or ANT/BFO.
10) Press the **ENT** Key to complete the selection.

DME TUNING (OPTIONAL)

1) Select the **ADF/DME** or **DME** Softkey.
2) Turn the large **FMS** to select the DME source field.
3) Turn the small **FMS** Knob to select the desired Nav radio.
4) Press the **ENT** Key to complete the selection.

ENTER A TRANSPONDER CODE

1) Select the **XPDR** Softkey to display the transponder mode selection softkeys.
2) Select the **CODE** Softkey to display the transponder code selection softkeys, for digit entry.
3) Select the digit softkeys to enter the code in the code field. When entering the code, the next key in sequence must be pressed within 10 seconds, or the entry is cancelled and restored to the previous code. Five seconds after the fourth digit has been entered, the transponder code becomes active.

SELECTING A COM RADIO

Transmit/Receive

Press the **COM1 MIC**, **COM2 MIC**, or **COM3 MIC** Key (optional COM, if installed) on the audio panel.

Receive Only

Press the **COM1**, **COM2**, or **COM3** Key (optional COM, if installed) on the audio panel.

SELECTING A NAV RADIO

1) To begin navigating using a navigation radio, press the **CDI** Softkey on the PFD to select VOR1/LOC1 (NAV1) or VOR2/LOC2 (NAV2).
2) Press the **NAV1**, **NAV2**, **DME**, or **ADF** Key on the audio panel to select or deselect the navigation radio audio source. All radio keys can be selected individually or together.

NAV/COM TUNING

1) Press the small tuning knob to select the desired radio for tuning. A light blue box highlights the radio frequency to be tuned.
2) Turn the respective tuning knobs to enter the desired frequency into the standby frequency field. The large knob enters MHz and the small knob enters kHz.
3) Press the **Frequency Transfer** Key to place the frequency into the active frequency field.

SPLIT COM

During Split COM operation, both the pilot and the copilot can transmit simultaneously over separate radios. The pilot can still monitor NAV1, NAV2, ADF, DME, and MKR Audio as selected, but the copilot is only able to monitor COM2.

When Split COM operation is selected, COM1 is used by the pilot and COM2 is used by the copilot. The COM1 MIC Annunciator flashes when the pilot's microphone PTT is pressed. The COM2 MIC Annunciator flashes when the copilot's microphone PTT is pressed.

Pressing the **COM 1/2** Key selects Split COM operation. The COM 1/2 Annunciator is illuminated indicating Split COM operation. COM1 and COM2 frequencies are

displayed in green indicating that both transceivers are active. Split COM operation is cancelled by pressing the **COM 1/2** Key again, at which time the annunciator is extinguished.

DIGITAL CLEARANCE RECORDER AND PLAYER

*NOTE: Only the audio for the selected **COM MIC** Key is recorded. Audio is not recorded for COM3 MIC.*

- Pressing the **PLAY** Key once plays the latest recorded memory block, then returns to normal operation.
- Pressing the **MKR/MUTE** Key while playing a memory block stops play.
- Pressing the **PLAY** Key during play begins playing the previously recorded memory block. Each subsequent press of the **PLAY** Key begins playing the next previously recorded block.

INTERCOM SYSTEM (ICS) ISOLATION

Press the **PILOT** and/or **COPLT** Key to select those isolated from hearing the Nav/Com radios and music.

Mode	PILOT KEY ANNUNCIATOR	COPLT KEY ANNUNCIATOR	Pilot Hears	Copilot Hears	Passenger Hears
ALL	OFF	OFF	Selected radios; pilot; copilot; passengers; music	Selected radios; pilot; copilot; passengers; music	Selected radios; pilot; copilot; passengers; music
PILOT	ON	OFF	Selected radios; pilot	Copilot; passengers; music	Copilot; passengers; music
COPILOT	OFF	ON	Selected radios; pilot; passengers; music	Copilot	Selected radios; pilot; passengers; music
CREW	ON	ON	Selected radios; pilot; copilot	Selected radios; pilot; copilot	Passengers; music

Blank Page

GFC 700 AUTOMATIC FLIGHT CONTROL SYSTEM

NOTE: *If sensor information (other than attitude) required for a flight director mode becomes invalid or unavailable, the flight director automatically reverts to the default mode for that axis.*

NOTE: *If the attitude information required for the default flight director modes becomes invalid or unavailable, the autopilot automatically disengages.*

FLIGHT DIRECTOR ACTIVATION

An initial press of a key listed in the following table (when the flight director is not active) activates the pilot-side flight director in the listed modes.

Control Pressed	Modes Selected			
	Lateral		Vertical	
FD Key	Roll Hold (default)	ROL	Pitch Hold (default)	PIT
AP Key	Roll Hold (default)	ROL	Pitch Hold (default)	PIT
CWS Switch	Roll Hold (default)	ROL	Pitch Hold (default)	PIT
GA Switch	Takeoff (on ground) Go Around (in air)	TO GA	Takeoff (on ground) Go Around (in air)	GA
ALT Key	Roll Hold (default)	ROL	Altitude Hold	ALT
VS Key	Roll Hold (default)	ROL	Vertical Speed	VS
VNV Key	Roll Hold (default)	ROL	Vertical Path Tracking*	VPTH
FLC Key	Roll Hold (default)	ROL	Flight Level Change	FLC
NAV Key	Navigation**	GPS VOR LOC	Pitch Hold (default)	PIT
BC Key (GDU 1044B)	Backcourse***	BC	Pitch Hold (default)	PIT
APR Key	Approach**	GPS VAPP LOC	Pitch Hold (default) Glidepath Glideslope	PIT GP GS
HDG Key	Heading Select	HDG	Pitch Hold (default)	PIT

Valid VNV flight plan must be entered before **VNV Key press activates flight director.*

***The selected navigation receiver must have a valid VOR or LOC signal or active GPS course before **NAV** or **APR** Key press activates flight director.*

****The selected navigation receiver must have a valid LOC signal before **BC** Key press activates flight director.*

VERTICAL MODES

Vertical Mode	Description	Control	Annunciation
Pitch Hold	Holds the current aircraft pitch attitude; may be used to climb/descend to the Selected Altitude	(default)	PIT
Selected Altitude Armed	Captures the Selected Altitude	*	ALTS
Altitude Hold	Holds the current Altitude Reference	**ALT** Key	ALT nnnnn FT
Vertical Speed	Holds aircraft vertical speed; may be used to climb/descend to the Selected Altitude	**VS** Key	VS nnnn FPM
Flight Level Change	Holds aircraft airspeed while aircraft is climbing/descending to the Selected Altitude	**FLC** Key	FLC nnn KT
Vertical Path Tracking	Captures and tracks descent legs of an active vertical profile	**VNV** Key	VPTH
VNAV Target Altitude Capture	Captures the Vertical Navigation (VNV) Target Altitude	**	ALTV
Glidepath ***	Captures and tracks the SBAS glidepath on approach	**APR** Key	GP
Glideslope	Captures and tracks the ILS glideslope on approach		GS
Go Around	Disengages the autopilot and commands a constant pitch attitude and wings level in the air	**GA** Switch	GA

* *ALTS armed automatically when PIT, VS, FLC, or GA active, and under VPTH when Selected Altitude is to be captured instead of VNAV Target Altitude*

** *ALTV armed automatically under VPTH when VNAV Target Altitude is to be captured instead of Selected Altitude*

*** *GP is available in installations with GIA 63W IAUs when SBAS is available.*

LATERAL MODES

Lateral Mode	Description	Control	Annunciation
Roll Hold	Holds the current aircraft roll attitude or rolls the wings level, depending on the commanded bank angle	(default)	ROL
Heading Select	Captures and tracks the Selected Heading	**HDG** Key	HDG
Navigation, GPS	Captures and tracks the selected navigation source (GPS, VOR, LOC)	**NAV** Key	GPS
Navigation, VOR Enroute Capture/Track			VOR
Navigation, LOC Capture/Track (No Glideslope)			LOC
Navigation, Backcourse Capture/Track (GDU 1044 only)	Captures and tracks a localizer signal for backcourse approaches		BC
Backcourse (GDU 1044B only)	Captures and tracks a localizer signal for backcourse approaches	**BC** Key (GDU 1044B only)	BC
Approach, GPS	Captures and tracks the selected navigation source (GPS, VOR, LOC)	**APR** Key	GPS
Approach, VOR Capture/Track			VAPP
Approach, LOC (Glideslope Mode automatically armed)			LOC
Go Around	Disengages the autopilot and commands a constant pitch angle and wings level	**GA** Switch	GA

Blank Page

GPS NAVIGATION

DIRECT-TO NAVIGATION

Direct-to Navigation from the MFD

1) Press the **Direct-to** (D▸) Key.
2) Enter the waypoint identifier.
3) Press the **ENT** Key to confirm the identifier. The 'Activate?' field is highlighted.
4) If no altitude constraint or course is desired, press the **ENT** Key to activate. To enter an altitude constraint, proceed to step 5.
5) Turn the large **FMS** Knob to place the cursor over the 'VNV' altitude field.
6) Enter the desired altitude.
7) Press the **ENT** Key. If the waypoint entered is an airport, the option to select MSL or AGL is now displayed. If the waypoint is not an airport, proceed to step 9.
8) Turn the small **FMS** Knob to select 'MSL' or 'AGL'.
9) Press the **ENT** Key. The cursor is now flashing in the VNV offset distance field.
10) Enter the desired offset distance before (-) the waypoint.
11) Press the **ENT** Key. The 'Activate?' field is highlighted.
12) Press the **ENT** Key to activate.

Direct-to Navigation from the PFD

1) Press the **Direct-to** Key (D▸).
2) Turn the large **FMS** Knob to place the cursor in the desired selection field.
3) Turn the small **FMS** Knob to begin selecting the desired identifier, location, etc.
4) Press the **ENT** Key.
5) The cursor is now flashing on 'ACTIVATE?'. If no altitude constraint or course is desired, press the **ENT** Key to activate. To enter an altitude constraint, proceed to step 6.
6) Turn the large **FMS** Knob to place the cursor over the 'ALT' altitude field.

7) Turn the small **FMS** Knob to enter the desired altitude.
8) Press the **ENT** Key. If the waypoint entered is an airport, the option to select MSL or AGL is now displayed. If the waypoint is not an airport, proceed to step 10.
9) Turn the small **FMS** Knob to select 'MSL' or 'AGL'.
10) Press the **ENT** Key. The cursor is placed in the 'OFFSET' field.
11) Turn the small **FMS** Knob to enter the desired target altitude offset from the selected Direct-to.
12) Press the **ENT** Key to highlight 'Activate?' or turn the large **FMS** Knob to highlight the 'CRS' field.
13) Turn the small **FMS** Knob to enter the desired course to the waypoint.
14) Press the **ENT** Key to highlight 'ACTIVATE?'.
15) Press the **ENT** again to activate the Direct-to.

ACTIVATE A STORED FLIGHT PLAN

1) Press the **FPL** Key on the MFD and turn the small **FMS** Knob to display the Flight Plan Catalog Page.
2) Press the **FMS** Knob to activate the cursor.
3) Turn the large **FMS** Knob to highlight the desired flight plan.
4) Select the **ACTIVE** Softkey. The confirmation window is now displayed.
5) With 'OK' highlighted, press the **ENT** Key to activate the flight plan. To cancel the flight plan activation, turn the large **FMS** Knob to highlight 'CANCEL' and press the **ENT** Key.

ACTIVATE A FLIGHT PLAN LEG

1) From the Active Flight Plan Page, press the **FMS** Knob to activate the cursor and turn the large **FMS** Knob to highlight the desired waypoint.
2) On the MFD, select the **ACT LEG** Softkey.

   Or:

   Press the **MENU** Key, select the 'Activate Leg' option from the page menu and press the **ENT** Key. This step must be used when activating a leg from the PFD.
3) With 'Activate' highlighted, press the **ENT** Key.

STOP NAVIGATING A FLIGHT PLAN

1) Press the **FPL** Key to display the Active Flight Plan Page.
2) Press the **MENU** Key to display the Page Menu Window.
3) Turn the large **FMS** Knob to highlight 'Delete Flight Plan' and press the **ENT** Key. With 'OK' highlighted, press the **ENT** Key to deactivate the flight plan. This does not delete the stored flight plan, only the active flight plan.

VERTICAL NAVIGATION (VNAV)

The navigation database only contains altitudes for procedures that call for "Cross at" altitudes. If the procedure states "Expect to cross at," the altitude is not in the database. In this case the altitude may be entered manually.

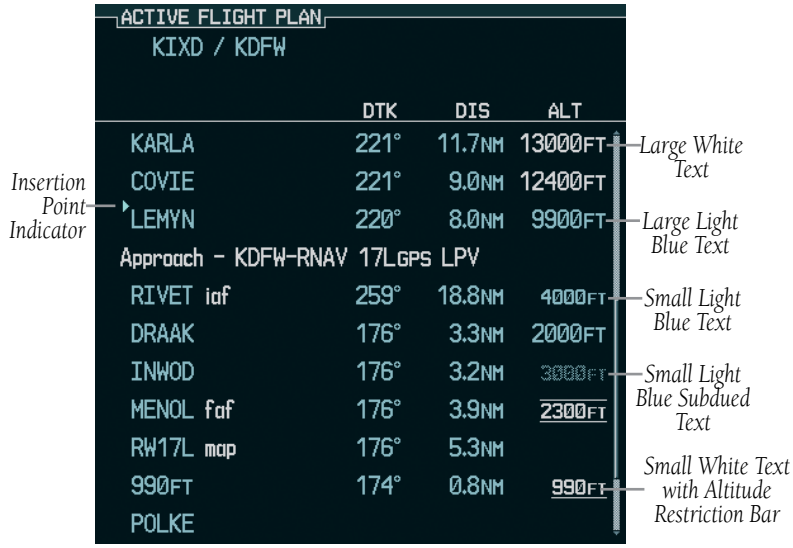

Cross AT or ABOVE 5,000 ft

Cross AT 2,300 ft

Cross AT or BELOW 3,000 ft

Altitudes associated with approach procedures are "auto-designated". This means the system automatically uses the altitudes loaded with the approach for giving vertical flight path guidance outside the FAF. Note these altitudes are displayed as small light blue text.

Altitudes associated with arrival procedures are "manually-designated". This means the system does not use the altitudes loaded with the arrival for giving vertical flight path guidance until designated to do so by the pilot. Note that these altitudes are initially displayed as white text. These altitudes may be "designated" by placing the cursor over the desired altitude and pressing the **ENT** Key. After designation, the text changes to light blue.

Altitudes that have been designated for use in vertical navigation may also be made "non-designated" by placing the cursor over the desired altitude and pressing the **CLR** Key. The altitude is now displayed only as a reference. It will not be used to give vertical flight path guidance. Other displayed altitudes may change due to re-calculations or rendered invalid as a result of manually changing an altitude to a non-designated altitude.

	White Text	Light Blue Text	Light Blue Subdued Text
Large Text	Altitude calculated by the system estimating the altitude of the aircraft as it passes over the navigation point. This altitude is provided as a reference and is not designated to be used in determining vertical flight path guidance.	Altitude has been entered by the pilot. Altitude is designated for use in giving vertical flight path guidance. Altitude does not match the published altitude in navigation database or no published altitude exists.	The system cannot use this altitude in determining vertical flight path guidance.
Small Text	Altitude is not designated to be used in determining vertical flight path guidance. Altitude has been retrieved from the navigation database and is provided as a reference.	Altitude is designated for use in giving vertical flight path guidance. Altitude has been retrieved from the navigation database or has been entered by the pilot and matches a published altitude in the navigation database.	The system cannot use this altitude in determining vertical flight path guidance.

FLIGHT PLANNING

TRIP PLANNING

1) Turn the large **FMS** Knob to select the 'AUX' page group.

2) Turn the small **FMS** Knob to select the Trip Planning page icon.

3) The current 'PAGE MODE' is displayed at the top of the page: 'AUTOMATIC' or 'MANUAL'. To change the page mode, select the **AUTO** or **MANUAL** Softkey.

4) For Direct-to planning:

a) Select the **WPTS** Softkey and verify that the starting waypoint field indicates 'P.POS' (present position).

b) If necessary, press the **MENU** Key and select 'Set WPT to Present Position' to display 'P.POS'.

c) Press the **ENT** Key and the flashing cursor moves to the ending waypoint field.

d) Enter the identifier of the ending waypoint and press the **ENT** Key to accept the waypoint.

Or:

For point-to-point planning:

a) Enter the identifier of the starting waypoint.

b) Once the waypoint's identifier is entered, press the **ENT** Key to accept the waypoint. The flashing cursor moves to the ending waypoint.

c) Again, enter the identifier of the ending waypoint.

d) Press the **ENT** Key to accept the waypoint.

Or:

For flight plan leg planning:

a) Press the **FPL** Softkey (at the bottom of the display).

b) Turn the small **FMS** Knob to select the desired flight plan (already stored in memory), by number.

c) Turn the large **FMS** Knob to highlight the 'LEG' field.

d) Turn the small **FMS** Knob to select the desired leg of the flight plan, or select 'CUM' to apply trip planning calculations to the entire flight plan. Selecting 'FPL 00' displays the active flight plan. If an active flight plan is selected, 'REM' is an available option to display planning data for the remainder of the flight plan.

NOTE: *The page mode must be set to 'MANUAL' to perform the following steps.*

5) Turn the large **FMS** Knob to highlight the departure time (DEP TIME) field.

NOTE: *The departure time on the Trip Planning Page is used for preflight planning. Refer to the Utility Page for the actual flight departure time.*

6) Enter the departure time. Press the **ENT** Key when finished. Departure time may be entered in local or UTC time, depending upon system settings.

7) The flashing cursor moves to the ground speed (GS) field. Enter the ground speed. Press the **ENT** Key when finished. Note that in 'automatic' page mode, ground speed is provided by the system.

8) The flashing cursor moves to the fuel flow field. Enter the fuel flow. Press the **ENT** Key when finished. Note that in 'AUTOMATIC' page mode, fuel flow is provided by the system.

9) The flashing cursor moves to the fuel onboard field. Enter the fuel onboard. Press the **ENT** Key when finished. Note that in 'AUTOMATIC' page mode, fuel onboard is provided by the fuel totalizer.

10) The flashing cursor moves to the calibrated airspeed (CALIBRATED AS) field. Enter the calibrated airspeed. Press the **ENT** Key when finished. Note that in 'AUTOMATIC' page mode, calibrated airspeed is provided by the system.

11) The flashing cursor moves to the altitude (IND ALTITUDE) field. Enter the altitude. Press the **ENT** Key when finished. Note that in 'AUTOMATIC' page mode, altitude is provided by the system.

12) The flashing cursor moves to the barometric setting (PRESSURE) field. Enter the desired baro setting. Press the **ENT** Key when finished. Note that in 'AUTOMATIC' page mode, the baro setting is provided by the setting entered on the PFD.

13) The flashing cursor moves to the air temperature (TOTAL AIR TEMP) field. Enter the desired air temperature. Press the **ENT** Key when finished. Note that in 'AUTOMATIC' page mode, air temperature is provided by the system outside air temperature.

CREATE A USER WAYPOINT DEFINED BY LATITUDE & LONGITUDE

1) Turn the large **FMS** Knob on the MFD to select the 'WPT' page group.
2) Turn the small **FMS** Knob to select the User WPT Information Page.
3) Press the **NEW** Softkey. A waypoint is created at the current aircraft position.
4) Enter the desired waypoint name.
5) Press the **ENT** Key.
6) The cursor is now in the 'WAYPOINT TYPE' field. If desired, the waypoint can be made temporary (deleted automatically when the system is turned off). If the waypoint is to remain in the system, proceed to step 7.
   a) Turn the large **FMS** Knob one click to the left to highlight 'TEMPORARY'.
   b) Press the **ENT** Key to place a check-mark in the box. Turn the large **FMS** Knob to place the cursor back in the 'WAYPOINT TYPE' field.
7) With the cursor in the 'WAYPOINT TYPE' field, turn the small **FMS** Knob to display a list of waypoint types.
8) Turn the small **FMS** Knob to select LAT/LON (latitude and longitude).
9) Press the **ENT** Key.

CREATE A USER WAYPOINT DEFINED BY RADIALS FROM OTHER WAYPOINTS

1) Turn the large **FMS** Knob on the MFD to select the 'WPT' page group.
2) Turn the small **FMS** Knob to select the User WPT Information Page.
3) Press the **NEW** Softkey. A waypoint is created at the current aircraft position.
4) Enter the desired waypoint name.
5) Press the **ENT** Key.
6) The cursor is now in the 'WAYPOINT TYPE' field. If desired, the waypoint can be made temporary (deleted automatically when the system is turned off). If the waypoint is to remain in the system, proceed to step 7.
   a) Turn the large **FMS** Knob one click to the left to highlight 'TEMPORARY'.
   b) Press the **ENT** Key to place a check-mark in the box. Turn the large **FMS** Knob to place the cursor back in the 'WAYPOINT TYPE' field.

7) With the cursor in the 'WAYPOINT TYPE' field, turn the small **FMS** Knob to display a list of waypoint types.

8) Turn the small **FMS** Knob to select RAD/RAD (radial/radial).

9) Press the **ENT** Key.

10) The cursor moves to the 'REFERENCE WAYPOINTS' field. With the first waypoint name highlighted, use the **FMS** Knobs to enter the desired waypoint name. Waypoints may also be selected as follows:

a) When a flight plan is active, turning the small **FMS** Knob to the left will display a list of the flight plan waypoints.

b) Turn the large **FMS** Knob to select the desired waypoint.

c) Press the **ENT** Key.

Or:

a) Turn the small **FMS** Knob to the left. Initially, a flight plan waypoint list is displayed.

b) Turn the small **FMS** Knob to the right to display the 'NRST' airports to the aircraft's current position.

c) Turn the large **FMS** Knob to select the desired waypoint.

d) Press the **ENT** Key.

Or:

a) Turn the small **FMS** Knob to the left. Initially, a flight plan waypoint list is displayed.

b) Turn the small **FMS** Knob to the right to display the 'RECENT' waypoints.

c) Turn the large **FMS** Knob to select the desired waypoint.

d) Press the **ENT** Key.

Or:

a) Turn the small **FMS** Knob to the left. Initially, a flight plan waypoint list is displayed.

b) Turn the small **FMS** Knob to the right to display the 'USER' waypoints.

c) Turn the large **FMS** Knob to select the desired waypoint.

d) Press the **ENT** Key.

11) Press the **ENT** Key. The cursor is displayed in the 'RAD' (radial) field. Enter the desired radial from the reference waypoint.

12) Press the **ENT** Key.

13) Repeat step 10 to enter the next waypoint name.

14) Press the **ENT** Key. The cursor is displayed in the 'RAD' (radial) field for the second waypoint. Enter the desired radial from the reference waypoint.

15) Press the **ENT** Key.

16) Press the **FMS** Knob to remove the flashing cursor.

CREATE A USER WAYPOINT DEFINED BY A RADIAL & DISTANCE FROM ANOTHER WAYPOINT

1) Turn the large **FMS** Knob on the MFD to select the 'WPT' page group.

2) Turn the small **FMS** Knob to select the User WPT Information Page.

3) Press the **NEW** Softkey. A waypoint is created at the current aircraft position.

4) Enter the desired waypoint name.

5) Press the **ENT** Key.

6) The cursor is now in the 'WAYPOINT TYPE' field. If desired, the waypoint can be made temporary (deleted automatically when the system is turned off). If the waypoint is to remain in the system, proceed to step 7.

- **a)** Turn the large **FMS** Knob one click to the left to highlight 'TEMPORARY'.
- **b)** Press the **ENT** Key to place a check-mark in the box. Turn the large **FMS** Knob to place the cursor back in the 'WAYPOINT TYPE' field.

7) With the cursor in the 'WAYPOINT TYPE' field, turn the small **FMS** Knob to display a list of waypoint types.

8) Turn the small **FMS** Knob to select RAD/DIS (radial/distance).

9) Press the **ENT** Key.

10) The cursor moves to the 'REFERENCE WAYPOINTS' field. With the first waypoint name highlighted, use the **FMS** Knobs to enter the desired waypoint name. Waypoints may also be selected as follows:

- **a)** When a flight plan is active, turning the small **FMS** Knob to the left will display a list of the flight plan waypoints.
- **b)** Turn the large **FMS** Knob to select the desired waypoint.
- **c)** Press the **ENT** Key.

Or:

a) Turn the small **FMS** Knob to the left. Initially, a flight plan waypoint list is displayed.

b) Turn the small **FMS** Knob to the right to display the 'NRST' airports to the aircraft's current position.

c) Turn the large **FMS** Knob to select the desired waypoint.

d) Press the **ENT** Key.

Or:

a) Turn the small **FMS** Knob to the left. Initially, a flight plan waypoint list is displayed.

b) Turn the small **FMS** Knob to the right to display the 'RECENT' waypoints.

c) Turn the large **FMS** Knob to select the desired waypoint.

d) Press the **ENT** Key.

Or:

a) Turn the small **FMS** Knob to the left. Initially, a flight plan waypoint list is displayed.

b) Turn the small **FMS** Knob to the right to display the 'USER' waypoints.

c) Turn the large **FMS** Knob to select the desired waypoint.

d) Press the **ENT** Key.

11) Press the **ENT** Key. The cursor is displayed in the 'RAD' (radial) field. Enter the desired radial from the reference waypoint.

12) Press the **ENT** Key.

13) The cursor is now displayed in the 'DIS' (distance) field. Enter the desired distance from the reference waypoint.

14) Press the **ENT** Key.

15) Press the **FMS** Knob to remove the flashing cursor.

CREATE A USER WAYPOINT USING THE MAP POINTER

1) Press the **Joystick** to activate the panning function and pan to the map location of the desired user waypoint.

2) Press the **ENT** Key. The User Waypoint Information Page is displayed with the captured position.

NOTE: *If the pointer has highlighted a map database feature, one of three things happens upon pressing the* **ENT** *Key: 1) information about the selected feature is displayed instead of initiating a new waypoint, 2) a menu pops up allowing a choice between 'Review Airspaces' or 'Create User Waypoint', or 3) a new waypoint is initiated with the default name being the selected map item.*

3) Enter a user waypoint name (up to six characters).
4) Press the **ENT** Key to accept the selected name.
5) If desired, define the type and location (i.e., LAT/LON, RAD/RAD or RAD/DIS) of the waypoint.
6) Press the **ENT** Key to accept the new waypoint.
7) If desired, change the storage method of the waypoint to "TEMPORARY" or "NORMAL" by moving the cursor to "TEMPORARY" and selecting the **ENT** Key to check or uncheck the box.
8) Press the **FMS** Knob to remove the flashing cursor.
9) Press the **GO BACK** Softkey to return to the map page

DELETE A USER WAYPOINT

1) Turn the large **FMS** Knob to select the 'WPT' page group.
2) Turn the small **FMS** Knob to select the User WPT Information Page.
3) Press the **FMS** Knob to activate the cursor.
4) Turn the large **FMS** Knob to the place the cursor in the 'USER WAYPOINT LIST' field.
5) Turn the small **FMS** Knob to highlight the desired waypoint.
6) Press the **DELETE** Softkey.
7) The message 'Would you like to delete the user waypoint?' is displayed. With 'YES' highlighted, press the **ENT** Key.

CREATE A FLIGHT PLAN

NOTE: When creating a flight plan in the Active Flight Plan Window, the first leg is activated automatically after it is created.

Creating an active flight plan:

1) Press the **FPL** Key.
2) Press the **FMS** Knob to activate the cursor (only on MFD).
3) Turn the small **FMS** Knob to display the Waypoint Information Window. (Turning it clockwise displays a blank Waypoint Information Window, turning it counter-clockwise displays the Waypoint Information Window with a waypoint selection submenu allowing selection of active flight plan, nearest, recent, user, or airway waypoints).
4) Enter the identifier, facility, or city name of the departure waypoint or select a waypoint from the submenu of waypoints and press the **ENT** Key. The active flight plan is modified as each waypoint is entered.
5) Repeat step numbers 3 and 4 to enter each additional flight plan waypoint.
6) When all waypoints have been entered, press the **FMS** Knob to remove the cursor.

Creating a stored flight plan:

1) Press the **FPL** Key.
2) Turn the small **FMS** Knob clockwise to display the Flight Plan Catalog Page.
3) Select the **NEW** Softkey; or press the **MENU** Key, highlight 'Create New Flight Plan', and press the **ENT** Key to display a blank flight plan for the first empty storage location.
4) Turn the small **FMS** Knob to display the Waypoint Information Window. (Turning it clockwise displays a blank Waypoint Information Window, turning it counter-clockwise displays the Waypoint Information Window with a waypoint selection submenu allowing selection of active flight plan, nearest, recent, user, or airway waypoints).
5) Enter the identifier, facility, or city name of the departure waypoint or select a waypoint from the submenu of waypoints and press the **ENT** Key.
6) Repeat step numbers 4 and 5 to enter each additional flight plan waypoint.
7) When all waypoints have been entered, press the **FMS** Knob to return to the Flight Plan Catalog Page. The new flight plan is now in the list.

IMPORT A FLIGHT PLAN FROM AN SD CARD

1) Insert the SD card containing the flight plan in the top card slot on the MFD.
2) Press the **FPL** Key on the MFD to display the Active Flight Plan Page on the MFD.
3) Turn the small **FMS** Knob to select the Flight Plan Catalog Page.
4) Press the **FMS** Knob to activate the cursor.
5) Turn either **FMS** Knob to highlight an empty or existing flight plan.
6) Press the **IMPORT** Softkey.

   If an empty flight plan is selected, a list of the available flight plans on the SD card will be displayed.

   Or:

   If an existing flight plan is selected, an 'Overwrite existing flight plan? OK or CANCEL' prompt is displayed. Press the **ENT** Key to choose to overwrite the selected flight plan and see a list of the available flight plans on the SD card. If overwriting the existing flight plan is not desired, select 'CANCEL' using the **FMS** Knob, press the **ENT** Key, select another existing or empty flight plan, and again press the **IMPORT** Softkey.
7) Turn the small **FMS** Knob to highlight the desired flight plan for importing.
8) Press the **ENT** Key.

INSERT A WAYPOINT IN THE ACTIVE FLIGHT PLAN

1) Press the **FPL** Key to display the active flight plan.
2) If necessary, press the **FMS** Knob to activate the cursor.
3) Turn the large **FMS** Knob to highlight the desired flight plan waypoint. The new waypoint is inserted before the highlighted waypoint (as indicated by the insertion point indicator).
4) Turn the small **FMS** Knob. The Waypoint Information Window is now displayed.
5) Enter the new flight plan waypoint by one of the following:
   a) Enter the user waypoint identifier, facility, or city.
   b) Press the **ENT** Key.

Or:

a) Turn the small **FMS** Knob to the left. Initially, a flight plan waypoint list is displayed.

b) Turn the small **FMS** Knob to the right to display the 'NRST' airports to the aircraft's current position.

c) Turn the large **FMS** Knob to select the desired waypoint.

d) Press the **ENT** Key.

Or:

a) Turn the small **FMS** Knob to the left. Initially, a flight plan waypoint list is displayed.

b) Turn the small **FMS** Knob to the right to display the 'RECENT' waypoints.

c) Turn the large **FMS** Knob to select the desired waypoint.

d) Press the **ENT** Key.

e) Press the **ENT** Key again to "accept" the waypoint.

ENTER AN AIRWAY IN A FLIGHT PLAN

1) Press the **FPL** Key.

2) Press the **FMS** Knob to activate the cursor (not required on the PFD).

3) Turn the large **FMS** Knob to highlight the waypoint after the desired airway entry point. The airway is inserted before the highlighted waypoint (as indicated by the insertion point indicator). If this waypoint is not a valid airway entry point, a valid entry point should be entered at this time.

4) Turn the small **FMS** Knob one click clockwise and select the **LD AIRWY** Softkey, or press the **MENU** Key and select "Load Airway". The Select Airway Page is displayed. The **LD AIRWY** Softkey or the "Load Airway" menu item is available only when an acceptable airway entry waypoint has been chosen.

5) Turn the **FMS** Knob to select the desired airway from the list, and press the **ENT** Key. Low altitude airways are shown first in the list, followed by "all" altitude airways, and then high altitude airways.

6) Turn the **FMS** Knob to select the desired airway exit point from the list, and press the **ENT** Key. 'LOAD?' is highlighted.

7) Press the **ENT** Key. The system returns to editing the flight plan with the new airway inserted.

INVERT AN ACTIVE FLIGHT PLAN

1) Press the **FPL** Key to display the active flight plan.
2) Press the **MENU** Key to display the Page Menu.
3) Turn the large **FMS** Knob to highlight 'Invert Flight Plan'.
4) Press the **ENT** Key. The original flight plan remains intact in its flight plan catalog storage location.
5) With 'OK' highlighted, press the **ENT** Key to invert the flight plan.

REMOVE A DEPARTURE, ARRIVAL, APPROACH, OR AIRWAY FROM A FLIGHT PLAN

1) Press the **FPL** Key to display the active flight plan. Press the **FMS** Knob to activate the cursor.

   Or, for a stored flight plan:

   a) Press the **FPL** Key on the MFD and turn the small **FMS** Knob to select the Flight Plan Catalog Page.

   b) Press the **FMS** Knob to activate the cursor.

   c) Turn the large **FMS** Knob to highlight the desired flight plan.

   d) Select the **EDIT** Softkey.
2) Turn the large **FMS** Knob to highlight the title for the approach, departure, arrival, or airway to be deleted. Titles appear in white directly above the procedure's waypoints.
3) Press the **CLR** Key to display a confirmation window.
4) With 'OK' highlighted, press the **ENT** Key to remove the selected procedure or airway.

STORE A FLIGHT PLAN

1) After creating a flight plan on either the PFD or MFD, it may be saved by pressing the **MENU** Key.
2) Turn the large **FMS** Knob to highlight 'Store Flight Plan' and press the **ENT** Key.
3) With 'OK' highlighted, press the **ENT** Key to store the flight plan.

EDIT A STORED FLIGHT PLAN

1) Press the **FPL** Key on the MFD and turn the small **FMS** Knob to display the Flight Plan Catalog Page.
2) Press the **FMS** Knob to activate the cursor.
3) Turn the large **FMS** Knob to highlight the desired flight plan.
4) Select the **EDIT** Softkey.
5) Turn the large **FMS** Knob to place the cursor in the desired location.
6) Enter the changes, then press the **ENT** Key.
7) Press the **FMS** Knob to return to the Flight Plan Catalog Page.

DELETE A WAYPOINT FROM THE FLIGHT PLAN

1) Press the **FPL** Key to display the active flight plan. Press the **FMS** Knob to activate the cursor.

   Or, for a stored flight plan:

   a) Press the **FPL** Key on the MFD and turn the small **FMS** Knob to select the Flight Plan Catalog Page.
   b) Press the **FMS** Knob to activate the cursor.
   c) Turn the large **FMS** Knob to highlight the desired flight plan.
   d) Select the **EDIT** Softkey.
2) Turn the large **FMS** Knob to highlight the waypoint to be deleted.
3) Press the **CLR** Key to display a 'REMOVE (Wpt Name)?' confirmation window.
4) With 'OK' highlighted, press the **ENT** Key to remove the waypoint. To cancel the delete request, turn the large **FMS** Knob to highlight 'CANCEL' and press the **ENT** Key.
5) Once all changes have been made, press the **FMS** Knob to remove the cursor.

INVERT AND ACTIVATE A STORED FLIGHT PLAN

1) Press the **FPL** Key on the MFD.
2) Turn the small **FMS** Knob to select the Flight Plan Catalog Page.
3) Press the **FMS** Knob to activate the cursor.

4) Turn the large **FMS** Knob to highlight the desired flight plan.
5) Select the **INVERT** Softkey. 'Invert and activate stored flight plan?' is displayed.
6) With 'OK' highlighted, press the **ENT** Key. The selected flight plan is now inverted and activated. The original flight plan remains intact in its flight plan catalog storage location.

COPY A FLIGHT PLAN

1) Press the **FPL** Key on the MFD.
2) Turn the small **FMS** Knob to select the Flight Plan Catalog Page.
3) Press the **FMS** Knob to activate the cursor.
4) Turn the large **FMS** Knob to highlight the flight plan to be copied.
5) Select the **COPY** Softkey. A 'Copy to flight plan #?' confirmation window is displayed.
6) With 'OK' highlighted, press the **ENT** Key to copy the flight plan. To cancel, turn the large **FMS** Knob to highlight 'CANCEL' and press the **ENT** Key.

DELETE A FLIGHT PLAN

1) Press the **FPL** Key on the MFD.
2) Turn the small **FMS** Knob to select the Flight Plan Catalog Page.
3) Press the **FMS** Knob to activate the cursor.
4) Turn the large **FMS** Knob to highlight the flight plan to be deleted.
5) Select the **DELETE** Softkey. A 'Delete flight plan #?' confirmation window is displayed.
6) With 'OK' highlighted, press the **ENT** Key to delete the flight plan. To cancel, turn the large **FMS** Knob to highlight 'CANCEL' and press the **ENT** Key.

GRAPHICAL FLIGHT PLAN CREATION

1) Press the **FPL** Key to display the Active Flight Plan Page on the MFD.
2) Press the **Joystick** to activate the map pointer. Use the **Joystick** to move the pointer to the desired point on the map to be inserted as a waypoint in the flight plan.
3) The default insertion point is at the end of the flight plan. If the selected waypoint is to be placed anywhere other than the end of the flight plan, press the **FMS** Knob to activate the cursor. Waypoints are inserted *ABOVE* the cursor (as indicated by the insertion point indicator). Turn the large **FMS** Knob to select the desired insertion point.
4) Select the **LD WPT** Softkey. The selected waypoint is inserted at the selected point. The default user waypoint naming is USR000, USR001, USR002, and so on.
5) To change the user waypoint name, follow the procedure for modifying a user waypoint.

EXPORT A FLIGHT PLAN TO AN SD CARD

1) Insert the SD card into the top card slot on the MFD.
2) Press the **FPL** Key on the Contol Unit to display the Active Flight Plan Page on the MFD.
3) Turn the small **FMS** Knob to select the Flight Plan Catalog Page.
4) Press the **FMS** Knob to activate the cursor.
5) Turn the large **FMS** Knob to highlight the flight plan to be exported.
6) Press the **EXPORT** Softkey.
7) Press the **ENT** Key to confirm the export.

PROCEDURES

LOAD AND ACTIVATE A DEPARTURE PROCEDURE

1) Press the **PROC** Key.
2) Turn the large **FMS** Knob to highlight 'SELECT DEPARTURE'.
3) Press the **ENT** Key. The cursor is displayed in the 'DEPARTURE' field with a list of available departures.
4) Turn the large **FMS** Knob to highlight the desired departure.
5) Press the **ENT** Key. A list of runways may be displayed for the departure. If so, turn either **FMS** Knob to select the desired runway.
6) Press the **ENT** Key. The cursor is displayed in the 'TRANSITION' field with a list of available transitions.
7) Turn the large **FMS** Knob to highlight the desired transition.
8) Press the **ENT** Key.
9) With 'LOAD?' highlighted, press the **ENT** Key. The departure is active when the flight plan is active.

ACTIVATE A DEPARTURE LEG

1) Press the **FPL** Key on the MFD to display the active flight plan.
2) Press the **FMS** Knob to activate the cursor.
3) Turn the large **FMS** Knob to highlight the desired waypoint within the departure.
4) Select the **ACT LEG** Softkey. A confirmation window showing the selected leg is displayed.
5) With 'ACTIVATE' highlighted, press the **ENT** Key.

LOAD AN ARRIVAL PROCEDURE

1) Press the **PROC** Key.
2) Turn the large **FMS** Knob to highlight 'SELECT ARRIVAL'.
3) Press the **ENT** Key. The cursor is displayed in the 'ARRIVAL' field with a list of available arrivals.
4) Turn the large **FMS** Knob to highlight the desired arrival.
5) Press the **ENT** Key. A list of transitions is displayed for the selected arrival.
6) Turn either **FMS** Knob to select the desired transition.
7) Press the **ENT** Key. A list of runways may be displayed for the selected arrival.
8) Turn the large **FMS** Knob to highlight the desired runway.
9) Press the **ENT** Key.
10) With 'LOAD?' highlighted, press the **ENT** Key.
11) The arrival becomes part of the active flight plan.
12) If an altitude associated with a waypoint in an arrival procedure is to be used to calculate vertical guidance perform the following steps:
    a) Press the **FMS** Knob to activate the cursor.
    b) Turn the large **FMS** Knob to highlight the desired waypoint altitude.
    c) Press the **ENT** Key to designate the altitude for use in giving vertical guidance.

ACTIVATE AN ARRIVAL LEG

1) Press the **FPL** Key to display the active flight plan.
2) Press the **FMS** Knob to activate the cursor.
3) Turn the large **FMS** Knob to highlight the desired waypoint within the arrival.
4) Select the **ACT LEG** Softkey. A confirmation window showing the selected leg is displayed.
5) With 'ACTIVATE' highlighted, press the **ENT** Key.

LOAD AND/OR ACTIVATE AN APPROACH PROCEDURE

NOTE: *If certain GPS parameters (SBAS, RAIM, etc.) are not available, some published approach procedures for the desired airport may not be displayed in the list of available approaches.*

1) Press the **PROC** Key.

2) Turn the large **FMS** Knob to highlight 'SELECT APPROACH'.

3) Press the **ENT** Key. A list of available approaches for the destination airport is displayed.

4) Turn either **FMS** Knob to highlight the desired approach.

5) Press the **ENT** Key. A list of available transitions for the selected approach procedure is now displayed.

6) Turn either **FMS** Knob to select the desired transition. The "Vectors" option assumes vectors will be received to the final course segment of the approach and will provide navigation guidance relative to the final approach course.

7) Press the **ENT** Key. The cursor moves to the MINIMUMS field.

8) If desired, the DA/MDA for the selected approach procedure may be entered and displayed on the PFD. Turn the small **FMS** Knob in the direction of the green arrow to change the display from OFF to BARO.

9) Press the **ENT** Key. The cursor moves to the altitude field. Turn the small **FMS** Knob to enter the published DA/MDA for the selected approach procedure.

10) Press the **ENT** Key. 'LOAD? or ACTIVATE?' is now displayed with 'LOAD?' highlighted.

11) Turn the large **FMS** Knob to select either 'LOAD?' or 'ACTIVATE?'.

Selecting 'LOAD?' enters the selected approach procedure into the active flight plan, but is not currently active. Selecting 'ACTIVATE?' enters the selected approach procedure into the active flight plan and activates the first leg of the approach.

12) Press the **ENT** Key.

ACTIVATE AN APPROACH IN THE ACTIVE FLIGHT PLAN

1) Press the **PROC** Key.
2) Turn the large **FMS** Knob to highlight 'ACTIVATE APPROACH'.
3) Press the **ENT** Key.

ACTIVATE A VECTOR TO FINAL APPROACH FIX

1) Press the **PROC** Key.
2) Turn the large **FMS** Knob to highlight 'ACTIVATE VECTOR-TO-FINAL'.
3) Press the **ENT** Key.
4) The final approach course becomes the active leg.

ACTIVATE A MISSED APPROACH IN THE ACTIVE FLIGHT PLAN

1) Press the **PROC** Key.
2) Turn the large **FMS** Knob to highlight 'ACTIVATE MISSED APPROACH'.
3) Press the **ENT** Key. A confirmation window is displayed.
4) With 'ACTIVATE' highlighted, press the **ENT** Key.

   Or:

   Press the Go-around Switch.

HAZARD AVOIDANCE

CUSTOMIZING THE HAZARD DISPLAYS ON THE NAVIGATION MAP

1) With the Navigation Map Page displayed, press the **MENU** Key to display the Navigation Map Page Menu. The cursor flashes on the 'Map Setup' option.
2) Press the **ENT** Key. The Map Setup Menu is displayed. Turn the small **FMS** Knob to select 'Weather' to customize the display of weather features. Select 'Traffic' to customize the display of traffic.
3) Press the small **FMS** Knob to return to the Navigation Map Page.

STORMSCOPE® (OPTIONAL)

WARNING: *The Stormscope system is not intended to be used for hazardous thunderstorm penetration. Weather information on the G1000 MFD is approved for weather avoidance only. Refer to the WX-500 Pilot's Guide for detailed operation.*

Displaying Stormscope Lightning Data on the Navigation Map Page

1) Press the **MAP** Softkey.
2) Press the **STRMSCP** Softkey. Press the **STRMSCP** Softkey again to remove Stormscope Lightning Data from the Navigation Map Page.

Lightning Age	Symbol
Strike is less than 6 seconds old	
Strike is between 6 and 60 seconds old	
Strike is between 1 and 2 minutes old	
Strike is between 2 and 3 minutes old	

Select 'Cell' or 'Strike' as the Stormscope Lightning Mode

1) Press the **MENU** Key (with the Navigation Map Page displayed).
2) Turn either **FMS** Knob to highlight 'Map Setup'.
3) Press the **ENT** Key.
4) Turn the small **FMS** Knob to highlight 'Weather'.

5) Press the **ENT** Key.
6) Turn the large **FMS** Knob to place the cursor in the 'STRMSCP MODE' field.
7) Turn the small **FMS** Knob to display the 'Cell/Strike' window.
8) Turn either **FMS** Knob to select 'Cell' or 'Strike'. Press the **ENT** Key.
9) Push the **FMS** Knob to return to the Navigation Map Page.

Clear Stormscope Lightning Data from the Navigation Map Page

1) Press the **MENU** Key (with the Navigation Map Page displayed).
2) Turn either **FMS** Knob to highlight the 'Clear Stormscope® Lightning' field and press the **ENT** Key.

NOTE: *If heading input is lost, strikes and/or cells must be cleared manually after the execution of each turn. This is to ensure that the strike and/or cell positions are depicted accurately in relation to the nose of the aircraft.*

Stormscope Page

1) Turn the large **FMS** Knob until the Map Page group is selected.
2) Turn the small **FMS** Knob until the Stormscope Page is selected.

Change the Stormscope Lightning Mode Between 'Cell' and 'Strike'

1) Select the Stormscope Page.
2) Press the **MODE** Softkey. The **CELL** and **STRIKE** Softkeys are displayed. Press the **CELL** Softkey to display 'CELL' data or press the **STRIKE** Softkey to display 'STRIKE' data. 'CELL' or 'STRIKE' is displayed in the mode box located in the upper left corner of the Stormscope Page.

NOTE: *"Cell mode" uses a clustering program to identify clusters of electrical activity that indicate cells.*

Change the Viewing Mode Between 360˚ and 120˚

1) Select the Stormscope Page.
2) Press the **VIEW** Softkey. The **360** and **ARC** Softkeys are displayed. Press the **360** Softkey to display a 360˚ viewing area or press the **ARC** Softkey to display a 120˚ viewing area.

   Press the **CLEAR** Softkey to remove all Stormscope lightning data from the display.

SIRIUSXM WEATHER (OPTIONAL)

WARNING: Do not use data link weather information for maneuvering in, near or around areas of hazardous weather. Information contained within data link weather products may not accurately depict current weather conditions.

Displaying SiriusXM Weather on the Navigation Map Page

1) Select the **MAP** Softkey.
2) Select the **NEXRAD, XM LTNG,** and **METAR** Softkey to display the desired weather. Select the applicable softkey again to remove weather data from the Navigation Map Page.

Display METAR and TAF information on the Airport Information Page

1) Turn the large **FMS** Knob to select the WPT Page Group.
2) Turn the small **FMS** Knob to select the Airport Information Page.
3) Select the **WX** Softkey to display METAR and TAF text (METAR and TAF information is updated every 12 minutes).

Displaying Weather on the Weather Data Link Page

1) Turn the large **FMS** Knob to select the Map Page Group.
2) Turn the small **FMS** Knob to select the Weather Data Link Page.
3) Select the available softkeys to select the desired XM weather product.
4) Select the **LEGEND** Softkey to view the legends for the selected products. If necessary, turn either **FMS** Knob to scroll through the list. Press the small **FMS** Knob or the **ENT** Key to return to the map.

Map Panning Information – Weather Data Link Page

1) Push in the **Joystick** to display the panning arrow.
2) Move the **Joystick** to place the panning arrow on AIRMETs, TFRs, METARs, or SIGMETs.
3) Press the **ENT** Key to display pertinent information for the selected product.

   Note that pressing the **ENT** Key when panning over an AIRMET or a SIGMET displays an information box that shows the text of the report. Panning over an airport with METAR information does not display more information but allows the user to press the **ENT** Key and select that Airport's Information Page to display the text of the report. Pressing the **ENT** Key when panning over a TFR displays TFR specific information.

SiriusXM Weather Products and Symbols

Wx Product Status Icons	Description
	NEXRAD - Available for the US and Canada. The age of the displayed data for each is shown at the right.
	ECHO TOP - The age of the displayed data is shown at the right. Not displayed when CLOUD TOP is displayed.
	CLOUD TOP - The age of the displayed data is shown at the right. Not displayed when ECHO TOP is displayed.
	XM LIGHTNING - The age of the displayed data is shown at the right.
	CELL MOVEMENT - The age of the displayed data is shown at the right.
	SIGMET & AIRMET - The age of the displayed data for each is shown at the right.
	METAR - Available for the US and Canada. The age of the displayed data for each is shown at the right.
	SURFACE ANALYSIS with CITY FORECAST - The upper symbol depicts Surface Analysis. The lower symbol depicts City Forecast. The age of the displayed data for each is shown at the right. The selected forecast period is shown at the bottom.
	FREEZING LEVEL - The age of the displayed data is shown at the right.
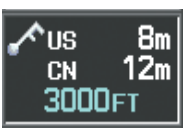	**WINDS ALOFT** - Available for the US and Canada. The age of the displayed data for each is shown at the right. The altitude selection is shown at the bottom.
	COUNTY WARNING - The age of the displayed data is shown at the right.
	CYCLONE WARNING - The age of the displayed data is shown at the right.

Wx Product Status Icons	Description
	AIREP - The age of the displayed data is shown at the right.
	PIREP - The age of the displayed data is shown at the right. Urgent Pireps are displayed in yellow.
	TURBULENCE - The age of the displayed data is shown at the right. The altitude selection is shown at the bottom.
	ICING POTENTIAL - The age of the displayed data is shown at the right. The altitude selection is shown at the bottom.
No Status Icon	**TFR**- Depicted as an area outlined in yellow

TRAFFIC SYSTEMS

- If Traffic information Service (TIS) is configured, **STANDBY**, **OPERATE**, and **TNA MUTE** softkeys are displayed.
- If a Traffic Advisory System (TAS) is configured, **STANDBY**, **NORMAL**, **TEST**, and **ALT MODE** softkeys are displayed.

Traffic Symbol	Description
	Non-Threat Traffic (intruder is beyond 5 nm and greater than 1200' vertical separation)
	Proximity Advisory (PA) (Not available with TIS system) (intruder is within 5 nm and less than 1200' vertical separation)
	Traffic Advisory (TA) (closing rate, distance, and vertical separation meet TA criteria)
	Traffic Advisory Off Scale

Traffic Symbol Description

Traffic Information Service (TIS)

NOTE: *Traffic Information Service (TIS) is only available when the aircraft is within the service volume of a TIS capable terminal radar site.*

NOTE: *If the G1000 is configured to use an optional Traffic Advisory System (TAS), TIS is not available for use.*

Displaying Traffic on the Traffic Map Page

1) Turn the large **FMS** Knob to select the Map Page Group.
2) Turn the small **FMS** Knob to select the Traffic Map Page.
3) Select the **OPERATE** Softkey to begin displaying traffic. 'OPERATING' is displayed in the Traffic Mode field.
4) Select the **STANDBY** Softkey to place the system in the Standby Mode. 'STANDBY' is displayed in the Traffic Mode field.
5) Rotate the **Joystick** clockwise to display a larger area or rotate counter-clockwise to display a smaller area.
6) Select the **TNA MUTE** Softkey to mute the "Traffic Not Available" aural alert.

Displaying Traffic on the Navigation Map

1) Ensure TIS is operating. With the Navigation Map displayed, select the **MAP** Softkey.
2) Select the **TRAFFIC** Softkey. Traffic is now displayed on the map.

Traffic Advisory System (TAS) (Optional)

Displaying Traffic on the Traffic Map Page

1) Turn the large **FMS** Knob to select the Map Page Group.
2) Turn the small **FMS** Knob to select the Traffic Map Page. 'OPERATING' is displayed in the Traffic Mode field.

3) Select the **ALT MODE** Softkey to change the altitude volume. Select the desired altitude volume by selecting the **BELOW**, **NORMAL**, **ABOVE**, or **UNREST** (unrestricted) Softkey. The selection is displayed in the Altitude Mode field.

4) Rotate the **Joystick** clockwise to display a larger area or rotate counter-clockwise to display a smaller area.

5) Select the **MUTE** Softkey to mute TAS voice alerts.

Displaying Traffic on the Navigation Map

1) Ensure TAS is operating.

2) With the Navigation Map displayed, select the **MAP** Softkey.

3) Select the **TRAFFIC** Softkey. Traffic is now displayed on the map.

TERRAIN AND OBSTACLE PROXIMITY

NOTE: *Terrain data is not displayed when the aircraft is outside the installed terrain database coverage area.*

Displaying Terrain and Obstacles on the Terrain Proximity Page

1) Turn the large **FMS** Knob to select the Map Page Group.

2) Turn the small **FMS** Knob to select the Terrain Proximity Page.

3) If desired, select the **VIEW** Softkey to access the **ARC** and **360** Softkeys. When the **ARC** Softkey is selected, a radar-like 120° view is displayed. Select the **360** Softkey to return to the 360° default display.

4) Rotate the **Joystick** clockwise to display a larger area or rotate counter-clockwise to display a smaller area.

Color	Terrain/Obstacle Location
Red	Terrain/Obstacle above or within 100' below current aircraft altitude.
Yellow	Terrain/Obstacle between 100' and 1000' below current aircraft altitude.
Black	Terrain/Obstacle is more than 1000' below aircraft altitude.

Displaying Terrain and Obstacles on the Navigation Map

1) With the Navigation Map displayed, select the **MAP** Softkey.
2) Select the **TERRAIN** Softkey. Terrain and obstacle proximity will now be displayed on the map.

TERRAIN-SVS

NOTE: *Terrain-SVS is only available when the Synthetic Vision System (SVS) option is installed and the TAWS option has not been installed.*

NOTE: *Terrain data is not displayed when the aircraft is outside the installed terrain database coverage area.*

Display Terrain on the TERRAIN-SVS Page

1) Turn the large **FMS** Knob to select the Map Page Group.
2) Turn the small **FMS** Knob to select the Terrain-SVS Page.
3) If desired, select the **VIEW** Softkey to access the **ARC** and **360** softkeys. When the **ARC** Softkey is selected, a radar-like 120° view is displayed. Select the **360** Softkey to return to the 360° default display.
4) Rotate the **Joystick** clockwise to display a larger area or rotate counter-clockwise to display a smaller area.

Color	Terrain/Obstacle Location
Red	Terrain/Obstacle above or within 100' below current aircraft altitude.
Yellow	Terrain/Obstacle between 100' and 1000' below current aircraft altitude.
Black	Terrain/Obstacle is more than 1000' below aircraft altitude.

Enable/Disable Aviation Data

1) While the Terrain-SVS Page is displayed, press the **MENU** Key.
2) Turn the small **FMS** Knob to select "Show (or Hide) Aviation Data".
3) Press the **ENT** Key.

Terrain-SVS Inhibit

Inhibit Terrain Alerting

While the Terrain-SVS Page is displayed, select the **INHIBIT** Softkey.

Or:

1) Press the **MENU** Key.
2) Turn the small **FMS** Knob to select 'Inhibit Terrain'.
3) Press the **ENT** Key.

Enable Terrain Alerting

While the Terrain-SVS Page is displayed, select the **INHIBIT** Softkey.

Or:

1) While the Terrain-SVS Page is displayed, press the **MENU** Key.
2) Turn the small **FMS** Knob to select 'Enable Terrain'.
3) Press the **ENT** Key.

NOTE: *If Terrain-SVS alerts are inhibited when the Final Approach Fix is the active waypoint in a GPS SBAS approach, a LOW ALT annunciation may appear on the PFD next to the altimeter if the current aircraft altitude is at least 164 feet below the prescribed altitude at the Final Approach Fix.*

TERRAIN AWARENESS & WARNING SYSTEM (TAWS) DISPLAY (OPTIONAL)

NOTE: *Terrain data is not displayed when the aircraft is outside the installed terrain database coverage area.*

NOTE: *TAWS operation is only available when the G1000 is configured for a TAWS-B installation.*

Manual System Test

1) While the TAWS-B Page is displayed, press the **MENU** Key.
2) Turn the small **FMS** Knob to select 'Test TAWS'.
3) Press the **ENT** Key. During the test 'TAWS TEST' is displayed in the center of the TAWS-B Page.

   When all is in working order, "TAWS System Test, OK" is heard.

Display Terrain on the TAWS-B Page

1) Turn the large **FMS** Knob to select the Map Page Group.
2) Turn the small **FMS** Knob to select the TAWS-B Page.
3) If desired, select the **VIEW** Softkey to access the **ARC** and **360** softkeys. When the **ARC** Softkey is selected, a radar-like 120° view is displayed. Select the **360** Softkey to return to the 360° default display.
4) Rotate the **Joystick** clockwise to display a larger area or rotate counter-clockwise to display a smaller area.

Color	Terrain/Obstacle Location
Red	Terrain/Obstacle above or within 100' below current aircraft altitude.
Yellow	Terrain/Obstacle between 100' and 1000' below current aircraft altitude.
Black	Terrain/Obstacle is more than 1000' below aircraft altitude.

Enable/Disable Aviation Data

1) While the TAWS-B Page is displayed, press the **MENU** Key.
2) Turn the small **FMS** Knob to select "Show (or Hide) Aviation Data".
3) Press the **ENT** Key.

TAWS Inhibit

NOTE: *If TAWS alerts are inhibited when the Final Approach Fix is the active waypoint in a GPS SBAS approach, a LOW ALT annunciation may appear on the PFD next to the altimeter if the current aircraft altitude is at least 164 feet below the prescribed altitude at the Final Approach Fix.*

Inhibit TAWS

While the TAWS-B Page is displayed, select the **INHIBIT** Softkey.

Or:

1) Press the **MENU** Key.
2) Turn the small **FMS** Knob to select 'Inhibit TAWS'.
3) Press the **ENT** Key.

Enable TAWS

While the TAWS-B Page is displayed, select the **INHIBIT** Softkey.

Or:

1) While the TAWS-B Page is displayed, press the **MENU** Key.
2) Turn the small **FMS** Knob to select 'Enable TAWS'.
3) Press the **ENT** Key.

Blank Page

ADDITIONAL FEATURES

SYNTHETIC VISION (OPTIONAL)

WARNING: *Use appropriate primary systems for navigation, and for terrain, obstacle, and traffic avoidance. SVS is intended as an aid to situational awareness only and may not provide either the accuracy or reliability upon which to solely base decisions and/or plan maneuvers to avoid terrain, obstacles, or traffic.*

WARNING: *Do not use SVS runway depiction as the sole means for determining the proximity of the aircraft to the runway or for maintaining the proper approach path angle during landing.*

Synthetic Vision System (SVS) functionality is offered as an optional enhancement to the G1000 system.

SVS is primarily comprised of a computer-generated forward-looking, attitude aligned view of the topography immediately in front of the aircraft from the pilot's perspective. SVS information is shown on the primary flight display (PFD).

In addition to SVS enhancement to the PFD, the following features have been added to the PFD:

- Pathways
- Flight Path Marker
- Horizon Heading Marks
- Terrain and Obstacle Alerting
- Three-dimensional Traffic
- Airport Signs
- Runway Display

Displaying SVS Terrain

1) Select the **PFD** Softkey.
2) Select the **SYN VIS** Softkey.
3) Select the **SYN TERR** Softkey.
4) Select the **BACK** Softkey to return to the previous page.

Displaying Pathways

1) Select the **PFD** Softkey.
2) Select the **SYN VIS** Softkey.
3) If not already enabled, select the **SYN TERR** Softkey.
4) Select the **PATHWAY** Softkey.
5) Select the **BACK** Softkey to return to the previous page.

Displaying Heading on the Horizon

1) Select the **PFD** Softkey.
2) Select the **SYN VIS** Softkey.
3) If not already enabled, select the **SYN TERR** Softkey.
4) Select the **HRZN HDG** Softkey.
5) Select the **BACK** Softkey to return to the previous page.

Displaying Airport Signs

1) Select the **PFD** Softkey.
2) Select the **SYN VIS** Softkey.
3) If not already enabled, select the **SYN TERR** Softkey.
4) Select the **APTSIGNS** Softkey.
5) Select the **BACK** Softkey to return to the previous page.

TERMINAL PROCEDURE CHARTS

NOTE: With the availability of SafeTaxi®, ChartView, or FliteCharts®, it may be necessary to carry another source of charts on-board the aircraft.

SafeTaxi®

SafeTaxi® is an enhanced feature that gives greater map detail as the map range is adjusted in on the airport. The airport display on the map reveals runways with numbers, taxiways identifiers, and airport landmarks including ramps, buildings, control towers, and other prominent features. Resolution is greater at lower map ranges. The aircraft symbol provides situational awareness while taxiing.

Selecting the **DCLTR** Softkey (declutter) once removes the taxiway markings and airport identification labels. Selecting the **DCLTR** Softkey twice removes VOR station ID, the VOR symbol, and intersection names if within the airport plan view. Selecting

the **DCLTR** Softkey a third time removes the airport runway layout, unless the airport in view is part of an active route structure. Selecting the **DCLTR** Softkey again cycles back to the original map detail.

The SafeTaxi database contains detailed airport diagrams for selected airports. These diagrams provide the pilot with situational awareness by displaying the aircraft position in relation to taxiways, ramps, runways, terminals, and services. This information should not be used by the pilot as the basis for maneuvering the aircraft on the ground. This database is updated on a 56-day cycle.

ChartView (Optional)

ChartView resembles the paper version of Jeppesen terminal procedures charts. The charts are displayed in full color with high-resolution. The MFD depiction shows the aircraft position on the moving map in the plan view of most approach charts and on airport diagrams.

The ChartView database is updated on a 14-day cycle. If the ChartView database is not updated within 70 days of the expiration date, ChartView will no longer function.

FliteCharts®

FliteCharts® resemble the paper version of AeroNav Services terminal procedures charts. The charts are displayed with high-resolution and in color for applicable charts. Current aircraft position is not displayed on FliteCharts.

The FliteCharts database contains procedure charts for the United States only. This database is updated on a 28-day cycle. If not updated within 180 days of the expiration date, FliteCharts will no longer function.

View Charts from the Navigation Map Page

1) Select the **SHW CHRT** Softkey when displayed.

   Or:

   Move the map pointer to point to a desired point on the map and select the **SHW CHRT** Softkey.

2) Select the **DP, STAR, APR, WX,** and **NOTAM** softkeys to access charts for departures, arrivals, approaches, weather and NOTAMs Note that NOTAMS are only available with ChartView.

3) Select the **GO BACK** Softkey to return to the previous page.

View Charts from the Active Flight Plan Page

1) While viewing the Active Flight Plan Page, press the **FMS** Knob to activate the cursor.
2) Turn the large **FMS** Knob to select the departure airport, destination airport, departure, arrival, or approach.
3) Select the **SHW CHRT** Softkey. The appropriate chart is displayed, if available for the item selected.
4) Select the **GO BACK** Softkey to return to the previous page.

Change Day/Night View

1) While viewing a chart press the **MENU** Key to display the Page Menu OPTIONS.
2) Turn the large **FMS** Knob to highlight the 'Chart Setup' Menu Option and press the **ENT** Key.
3) Turn the large **FMS** Knob to move between the 'FULL SCREEN' and 'COLOR SCHEME' Options.
4) Turn the small **FMS** Knob to choose between the 'On' and 'Off' Full Screen Options.
5) Turn the small **FMS** Knob to choose between 'Day', 'Auto', and 'Night' Options.
6) In Auto Mode, turn the large **FMS** Knob to select the percentage field and change percentage with the small **FMS** Knob. The percentage of change is the day/night crossover point based on backlighting intensity.
7) Press the **FMS** Knob when finished to remove the Chart Setup Menu.

AIRPORT DIRECTORY

The Aircraft Owners and Pilots Association (AOPA) or AC-U-KWIK Airport Directory database offers detailed information regarding services, hours of operation, lodging options, and more for various airports. This information is viewed on the WPT-Airport Information Page.

The Airport Directory databases are revised every 56 days. The Airport Directory is always available for use after the expiration date. Check fly.garmin.com for the current database.

View Airport Directory Information

While viewing the WPT-Airport Information Page, if necessary, select the **INFO-1** Softkey to change the softkey label to display **INFO-2**. Airport information is displayed on the right half of the display.

SIRIUSXM RADIO ENTERTAINMENT

The XM Radio Page provides information and control of the audio entertainment features of the SiriusXM Satellite Radio.

Selecting the XM Radio Page

1) Turn the large **FMS** Knob to select the Auxiliary Page Group.
2) Turn the small **FMS** Knob to select XM Radio.
3) Select the **RADIO** Softkey to show the XM Radio Page where audio entertainment is controlled.

Active Channel and Channel List

The Active Channel Box on the XM Radio Page displays the currently selected channel. The Channels List Box of the XM Radio Page shows a list of the available channels for the selected category.

Selecting a Category

The Category Box of the XM Radio Page displays the currently selected category of audio.

1) Select the **CATGRY** Softkey on the XM Radio Page.
2) Select the **CAT +** and **CAT –** softkeys to cycle through the categories.

   Or:

   Turn the small **FMS** Knob to display the 'Categories' list. Highlight the desired category with the small **FMS** Knob.
3) Press the **ENT** Key.

Select an Available Channel within the Selected Category

1) While on the XM Radio Page, select the **CHNL** Softkey.
2) Select the **CH +** Softkey to go down through the list in the Channel Box, or move up the list with the **CH –** Softkey.

Or:

Press the **FMS** Knob to highlight the channel list and turn the large **FMS** Knob to scroll through the channels.

3) With the desired channel highlighted, press the **ENT** Key.

Entering a Channel Directly

1) While on the XM Radio Page, select the **CHNL** Softkey.
2) Select the **DIR CH** Softkey. The channel number in the Active Channel Box is highlighted.
3) Select the numbered softkeys located on the bottom of the display to directly select the desired channel number.
4) Press the **ENT** Key to activate the selected channel.

Assigning Channel Presets

Up to 15 channels from any category can be assigned a preset number.

1) On the XM Radio Page, with the desired channel active, select the **PRESETS** Softkey to access the first five preset channels (**PS1 - PS5**).
2) Select the **MORE** Softkey to access the next five channels (**PS6 – PS10**), and again to access the last five channels (**PS11 – PS15**). Selecting the **MORE** Softkey repeatedly cycles through the preset channels.
3) Select the **SET** Softkey.
4) Select any one of the (**PS1 - PS15**) softkeys to assign a number to the active channel.

Adjusting Volume

1) With the XM Radio Page displayed, select the **VOL** Softkey.
2) Select the **VOL –** Softkey to reduce volume or select the **VOL +** Softkey to increase volume. (Once the **VOL** Softkey is selected, the volume can also be adjusted using the small **FMS** Knob.)
3) Select the **MUTE** Softkey to mute the audio. Select the **MUTE** Softkey again to unmute the audio.

AUXILIARY VIDEO (OPTIONAL)

There are four modes of operation of the optional auxiliary video display: Full-Screen, Full-Screen with Digital Zoom, Split-Screen with Map, and Split-Screen with Map and Digital Zoom.

Displaying auxiliary video:

1) Turn the large **FMS** Knob to select the AUX page group.
2) Turn the small **FMS** Knob to select VIDEO and display the AUX-VIDEO Page.

The video display softkeys shown below appear on the AUX - VIDEO Page. Control of the AUX - VIDEO Page can also be accessed through the Page Menu.

Selecting video menu options:

1) While viewing the AUX - VIDEO Page press the **MENU** Key to display the Page Menu OPTIONS.
2) Turn the large **FMS** Knob to highlight the desired video adjustment option and press the **ENT** Key.

Once the **ENT** key is pressed on any option, the page menu closes and returns to the AUX - VIDEO Page.

Video Setup

Video brightness, contrast, and saturation may be adjusted be selecting the setup function. While viewing the setup function softkeys, after 45 seconds of softkey inactivity, the system reverts to the AUX - VIDEO Page softkeys.

Adjusting the video settings:

1) With the AUX-VIDEO Page displayed, press the **SETUP** Softkey.
2) Press the **BRIGHT -** or **BRIGHT +**, to adjust display brightness in five percent increments from 0 to 100%.
3) Press the **CNTRST-** or **CNTRST +**, to adjust display contrast in five percent increments from 0 to 100%.
4) Press the **SAT -** or **SAT +**, to adjust display saturation in five percent increments from 0 to 100%.
5) If desired, return the display to the default settings by pressing the **RESET** Softkey.
6) Press the **BACK** Softkey to return to the previous softkey level.

Display Selection

Pressing the **HIDE MAP** Softkey removes the map and displays video on the full screen. The softkey label changes to grey with black characters. Pressing the **HIDE MAP** Softkey again restores the map view and the small video image. The softkey label returns to white characters on a black background.

Input Selection

While on the AUX - VIDEO Page, press the **INPUT** Softkey to select the EVS or AUX video source.

Zoom/Range

Pressing the **VID ZM +** or **VID ZM -** Softkeys increases or decreases video display magnification between 1x and 10x.

The **RANGE** Knob can be used to increase or decrease the range setting on the map display or zoom in and out on the video display. While in the Split-Screen mode, pressing the **MAP ACTV** or **VID ACTV** Softkey determines which display the **RANGE** Knob adjusts. Pressing the softkey to display MAP ACTV allows the **RANGE** Knob to control the range setting of the map display. Pressing the softkey to display VID ACTV allows the **RANGE** Knob to control the zoom setting of the video display.

When zooming in on the video display, a Zoom Window will appear in the upper right of the display. A box within this window indicates the portion of the display currently being viewed. The currently displayed portion of the full display may be adjusted by using the Joystick.

ELECTRONIC CHECKLISTS

The system accesses the checklists from an SD card inserted into the bezel slot. If the SD card contains an invalid checklist file or no checklist, the Power-up Page messages display 'Checklist File: Invalid' or 'Checklist File: N/A' (not available) and the **CHKLIST** Softkey is not available.

Accessing and Navigating Checklists

1) From any page on the MFD, press the **CHKLIST** Softkey.

2) Turn the large **FMS** Knob to select the 'GROUP' field.

3) Turn the small **FMS** Knob to select the desired procedure and press the **ENT** Key.

4) Turn the large **FMS** Knob to select the 'CHECKLIST' field.

5) Turn the **FMS** Knob to select the desired checklist and press the **ENT** Key. The selected checklist item is indicated with white text surrounded by a white box.

6) Press the **ENT** Key or **CHECK** Softkey to check the selected checklist item. The line item turns green and a checkmark is placed in the associated box. The next line item is automatically selected for checking.

Either **FMS** Knob can be used to scroll through the checklist and select the desired checklist item.

Press the **CLR** Key or **UNCHECK** Softkey to remove a check mark from an item.

7) When all checklist items have been checked, '*Checklist Finished*' is displayed in green text at the bottom left of the checklist window. If all items in the checklist have not been checked, '*CHECKLIST NOT FINISHED*' will be displayed in yellow text.

8) Press the **ENT** Key. 'GO TO NEXT CHECKLIST?' will be highlighted by the cursor.

9) Press the **ENT** Key to advance to the next checklist.

10) Press the **EXIT** Softkey to exit the Checklist Page and return to the page last viewed.

Immediately Accessing Emergency Procedures

1) From any page on the MFD, press the **CHKLIST** Softkey.
2) Press the **EMERGCY** Softkey.
3) Turn the **FMS** Knob to select the desired emergency checklist and press the **ENT** Key.
4) Press the **ENT** Key or **CHECK** Softkey to check the selected emergency checklist item. The line item turns green and a checkmark is placed in the box next to it. The next line item is automatically highlighted for checking.

   Either **FMS** Knob can be used to scroll through the checklist and select the desired checklist item.

   Press the **CLR** Key or **UNCHECK** Softkey to remove a check mark from an item.
5) When all checklist items have been checked, '*Checklist Finished*' is displayed in green text at the bottom left of the checklist window. If all items in the checklist have not been checked, '*CHECKLIST NOT FINISHED*' will be displayed in yellow text.
6) Press the **ENT** Key. 'GO TO NEXT CHECKLIST?' will be highlighted by the cursor.
7) Press the **ENT** Key to advance to the next checklist.
8) Press the **RETURN** Softkey to return to the previous checklist.
9) Press the **EXIT** Softkey to exit the Checklist Page and return to the page last viewed.

ABNORMAL OPERATION

REVERSIONARY MODE

Should a system detected failure occur in either display, the G1000 automatically enters reversionary mode. In reversionary mode, critical flight instrumentation is combined with engine instrumentation on the remaining display.

Reversionary display mode can be manually activated by pressing the **DISPLAY BACKUP** Button on the audio panel.

NOTE: *The Cessna Corvalis/Corvalis TT Airplane Flight Manual (AFM) always takes precedence over the information found in this section.*

ABNORMAL COM OPERATION

When a COM tuning failure is detected by the system, the emergency frequency (121.500 MHz) is automatically loaded into the active frequency field of the COM radio for which the tuning failure was detected.

AUDIO PANEL FAIL-SAFE OPERATION

If there is a failure of the Audio Panel, a fail-safe circuit connects the pilot's headset and microphone directly to the COM1 transceiver. Audio is not available on the speaker during Fail-safe operation.

HAZARD DISPLAYS WITH LOSS OF GPS POSITION

If GPS position is lost, or becomes invalid, selected hazards being displayed on the Navigation Map Page are removed until GPS position is again established.

Loss of Hazard Functions with Loss of GPS Position

UNUSUAL ATTITUDES

The PFD 'declutters' when the aircraft enters an unusual attitude. Only the primary functions are displayed in these situations.

The following information is removed from the PFD (and corresponding softkeys are disabled) when the aircraft experiences unusual attitudes:

- Traffic Annunciations
- AFCS Annunciations
- Flight director Command Bars
- Inset Map
- Temperatures
- DME Information Window
- Wind Data
- Selected Heading Box
- Selected Course Box
- Transponder Status Box
- System Time
- PFD Setup Menu
- Windows displayed in the lower right corner of the PFD:
  - Timer/References
  - Nearest Airports
  - Flight Plan
  - Messages
  - Procedures
  - ADF/DME Tuning
- Barometric Minimum Descent Altitude Box
- Glideslope, Glidepath, and Vertical Deviation Indicators
- Altimeter Barometric Setting
- Selected Altitude
- VNV Target Altitude

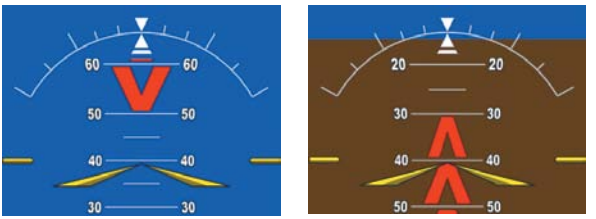

Extreme Pitch Indication

DEAD RECKONING

While in Enroute or Oceanic phase of flight, if the G1000 detects an invalid GPS solution or is unable to calculate a GPS position, the system automatically reverts to Dead Reckoning (DR) Mode. In DR Mode, the G1000 uses its last-known position combined with continuously updated airspeed and heading data (when available) to calculate and display the aircraft's current estimated position.

NOTE: *Dead Reckoning Mode only functions in Enroute (ENR) or Oceanic (OCN) phase of flight. In all other phases, an invalid GPS solution produces a "NO GPS POSITION" annunciation on the map and the G1000 stops navigating in GPS Mode.*

DR Mode is indicated on the G1000 by the appearance of the letters 'DR' superimposed in yellow over the 'own aircraft' symbol as shown in the following figure. In addition, 'DR' is prominently displayed, also in yellow, on the HSI slightly above and to the right of the aircraft symbol on the CDI as shown in the following figure. The CDI deviation bar is displayed in yellow, but will be removed from the display after 20 minutes. Lastly, but at the same time, a 'GPS NAV LOST' alert message appears on the PFD.

Normal navigation using GPS/SBAS source data resumes automatically once a valid GPS solution is restored.

It is important to note that estimated navigation data supplied by the G1000 in DR Mode may become increasingly unreliable and must not be used as a sole means of navigation. If, while in DR Mode, airspeed and/or heading data is also lost or not available, the DR function may not be capable of estimating your position and, consequently, the system may display a path that is different than the actual movement of the aircraft. Estimated position information displayed by the G1000 through DR while there is no heading and/or airspeed data available should not be used for navigation.

DR Mode is inherently less accurate than the standard GPS/SBAS Mode due to the lack of satellite measurements needed to determine a position. Changes in wind speed and/or wind direction compounds the relative inaccuracy of DR Mode. Because of this degraded accuracy, the crew must maintain position awareness using other navigation equipment until GPS-derived position data is restored.

CDI 'DR' Indication on PFD

Symbolic Aircraft (Map pages and Inset Map)

Dead Reckoning Indications

As a result of operating in DR Mode, all GPS-derived data is computed based upon an estimated position and is displayed as yellow text on the display to denote degraded navigation source information. This data includes the following:

- Navigation Status Box fields except Active Leg, TAS, and DTK
- GPS Bearing Pointer
- Wind data and pointers in the Wind Data Box on the PFD
- Current Track Indicator
- All Bearing Pointer Distances
- Active Flight Plan distances, bearings, and ETE values

Also, while the G1000 is in DR Mode, the autopilot will couple to GPS for up to 20 minutes. Terrain Proximity, TERRAIN-SVS, and TAWS are also disabled. Additionally, the accuracy of all nearest information (airports, airspaces, and waypoints) is questionable. Finally, airspace alerts continue to function, but with degraded accuracy.

ANNUNCIATIONS & ALERTS

G1000 SYSTEM ANNUNCIATIONS

When an LRU or an LRU function fails, a large red "X" is typically displayed on windows associated with the failed data. Refer to the Corvalis Pilot's Operating Handbook (POH) for additional information regarding pilot responses to these annunciations

System Annunciation	Comment
	Attitude and Heading Reference System is aligning.
	Display system is not receiving attitude information from the AHRS.
	GPS information is either not present or is invalid for navigation use. Note that AHRS utilizes GPS inputs during normal operation. AHRS operation may be degraded if GPS signals are not present (see POH).
	Display system is not receiving valid heading input from AHRS.
	Display system is not receiving valid transponder information.

G1000 SYSTEM ANNUNCIATIONS (CONT.)

System Annunciation	Comment
	Display system is not receiving airspeed input from air data computer.
	Display system is not receiving altitude input from the air data computer.
	Display system is not receiving vertical speed input from the air data computer.
Other Various Red X Indications	A red 'X' through any other display field (such as engine instrumentation display) indicates that the field is not receiving valid data.

WARNING ALERTS

Annunciation Window Text	Alerts Window Message	Audio Alert/Voice Message (Repeating)
DOOR OPEN	Door not secured	Chime/"Door Open"
FUEL VALVE	Fuel tank is not correctly selected or in OFF position	Chime/"Fuel Valve"
L BUS OFF	No power on the left bus	Chime
R BUS OFF	No power on the right bus	Chime
CO LVL HIGH	Carbon Monoxide level is too high	Chime/"Carbon Monoxide"
OIL PRES LOW	Low oil pressure	Chime/"Oil Pressure Low"

CAUTION ALERTS

Annunciation Window Text	Alerts Window Message	Audio Alert/Voice Message
L ALT OFF	Left Alternator offline	Single Chime/"Left Alternator Out"
R ALT OFF	Right Alternator offline	Single Chime/"Right Alternator Out"
FUEL PUMP	Fuel pump is operating	Single Chime/"Fuel Pump"
L-LOW FUEL	Low fuel in the left tank	Single Chime/None
R LOW FUEL	Low fuel in the right tank	Single Chime/None
OXYGEN	Pressure above 12,000 ft and oxygen off	Single Chime/None
OXYGEN PRES✧	Oxygen outlet pressure below 60 psi	Single Chime/None
OXYGEN PRES†	Oxygen outlet pressure below 16.5 psi	Single Chime/None
OXYGEN QTY	Oxygen quantity below 250 psi.	Single Chime/None
RUDR LMTR *	Rudder limter is engaged	Single Chime/None
STARTER ENGD	Starter relay has power applied	Single Chime/None

*Corvalis only / ✧High pressure oxygen outlet only / †Low pressure oxygen outlet only

ANNUNCIATION ADVISORY

Annunciation Window Text	Alerts Window Message	Audio Alert
AP/TRIM OFF	AP/TRIM master switch is in the OFF position	None
OXYGEN ON	Reminder: Turn off oxygen	None
RUDR HOLD *	Rudder hold is engaged	None
SPEED BRAKES	Speed brakes are active	None

* Corvalis TT only

MESSAGE ADVISORY ALERTS

Alerts Window Message	Audio Alert
PFD FAN FAIL – The cooling fan for the PFD is inoperative.	None
MFD FAN FAIL – The cooling fan for the MFD is inoperative.	None
AVIONICS FAN – The cooling fan for remote avionics is inoperative.	None
TIMER ZERO – Timer has counted down to zero.	"Timer Expired"
FUEL IMBAL – Fuel imbalance is greater than 10 gallons.	None
LOW MAN PRES – Manifold pressure is below 15 in.	None
VAPOR SUPPR – Turn on Vapor Suppression.*	None

* Corvalis TT only

CO GUARDIAN MESSAGES

Alerts Window Message	Comments
CO DET SRVC – The carbon monoxide detector needs service.	There is a problem within the CO Guardian that requires services.
CO DET FAIL – The carbon monoxide detector is inoperative.	Loss of communication between the G1000 and the CO Guardian.

AFCS ALERTS

Condition	Annunciation	Description
Pitch Failure		Pitch axis control failure. AP is inoperative.
Roll Failure		Roll axis control failure. AP is inoperative.
MET Switch Stuck, or Pitch Trim Axis Control Failure		If annunciated when AP is engaged, take control of the aircraft and disengage the autopilot. If annunciated when AP is not engaged, move each half of the MET switch separately to check if a stuck switch is causing the annunciation.
System Failure		AP and MET are unavailable. FD may still be available.
Elevator Mistrim Up		A condition has developed causing the pitch servo to provide a sustained force. Be prepared to apply nose up control wheel force upon autopilot disconnect.
Elevator Mistrim Down		A condition has developed causing the pitch servo to provide a sustained force. Be prepared to apply nose down control wheel force upon autopilot disconnect.
Aileron Mistrim Left		A condition has developed causing the roll servo to provide a sustained left force. Ensure the slip/skid indicator is centered and observe any maximum fuel imbalance limits.
Aileron Mistrim Right		A condition has developed causing the roll servo to provide a sustained right force. Ensure the slip/skid indicator is centered and observe any maximum fuel imbalance limits.
Preflight Test		Performing preflight system test. Upon completion, the aural alert will be heard.
		Preflight system test has failed.

TERRAIN-SVS ALERTS

Alert Type	PFD/MFD TERRAIN-SVS Page Annunciation	MFD Pop-Up Alert	Aural Message
Reduced Required Terrain Clearance Warning (RTC)	TERRAIN	WARNING - TERRAIN	"Warning; Terrain, Terrain"
Imminent Terrain Impact Warning (ITI)	TERRAIN	WARNING - TERRAIN	"Warning; Terrain, Terrain"
Reduced Required Obstacle Clearance Warning (ROC)	TERRAIN	WARNING - OBSTACLE	"Warning; Obstacle, Obstacle"
Imminent Obstacle Impact Warning (IOI)	TERRAIN	WARNING - OBSTACLE	"Warning; Obstacle, Obstacle"
Reduced Required Terrain Clearance Caution (RTC)	TERRAIN	CAUTION - TERRAIN	"Caution; Terrain, Terrain"
Imminent Terrain Impact Caution (ITI)	TERRAIN	CAUTION - TERRAIN	"Caution; Terrain, Terrain"
Reduced Required Obstacle Clearance Caution (ROC)	TERRAIN	CAUTION - OBSTACLE	"Caution; Obstacle, Obstacle"
Imminent Obstacle Impact Caution (IOI)	TERRAIN	CAUTION - OBSTACLE	"Caution; Obstacle, Obstacle"

TERRAIN-SVS SYSTEM STATUS ANNUNCIATIONS

Alert Type	PFD/MFD Alert Annunciation	TERRAIN-SVS Page Annunciation	Aural Message
System Test in Progress	TER TEST	TERRAIN TEST	None
System Test Pass	None	None	"Terrain System Test OK"
Terrain Alerting is disabled	TER INH	None	None
Terrain System Test Fail	TER FAIL	TERRAIN FAIL	"Terrain System Failure"
No GPS position	TER N/A	NO GPS POSITION	"Terrain System Not Available"

Alert Type	PFD/MFD Alert Annunciation	TERRAIN-SVS Page Annunciation	Aural Message
Terrain or Obstacle database unavailable or invalid, invalid software configuration, system audio fault	TER FAIL	TERRAIN FAIL	"Terrain System Failure"
MFD Terrain or Obstacle database unavailable or invalid. System operating with PFD Terrain or Obstacle databases	None	TERRAIN DATABASE FAILURE	None
Excessively degraded GPS signal or out of database coverage area	TER N/A	None	"Terrain System Not Available"
Sufficient GPS signal received after loss or database coverage area entered	None	None	"Terrain System Available"

TAWS-B ALERTS

Alert Type	PFD/MFD TAWS-B Page Annunciation	MFD Pop-Up Alert	Aural Message
Excessive Descent Rate Warning (EDR)	PULL UP	PULL-UP	"Pull Up"
Reduced Required Terrain Clearance Warning (RTC)	PULL UP	TERRAIN - PULL-UP or TERRAIN AHEAD - PULL-UP	"Terrain, Terrain; Pull Up, Pull Up" or "Terrain Ahead, Pull Up; Terrain Ahead, Pull Up"
Imminent Terrain Impact Warning (ITI)	PULL UP	TERRAIN AHEAD - PULL-UP or TERRAIN - PULL-UP	Terrain Ahead, Pull Up; Terrain Ahead, Pull Up" or "Terrain, Terrain; Pull Up, Pull Up"

Alert Type	PFD/MFD TAWS-B Page Annunciation	MFD Pop-Up Alert	Aural Message
Reduced Required Obstacle Clearance Warning (ROC)	PULL UP	OBSTACLE - PULL-UP or OBSTACLE AHEAD - PULL-UP	"Obstacle, Obstacle; Pull Up, Pull Up" or "Obstacle Ahead, Pull Up; Obstacle Ahead, Pull Up"
Imminent Obstacle Impact Warning (IOI)	PULL UP	OBSTACLE AHEAD - PULL-UP or OBSTACLE - PULL-UP	"Obstacle Ahead, Pull Up; Obstacle Ahead, Pull Up" or "Obstacle, Obstacle; Pull Up, Pull Up"
Reduced Required Terrain Clearance Caution (RTC)	TERRAIN	CAUTION - TERRAIN or TERRAIN AHEAD	"Caution, Terrain; Caution, Terrain" or "Terrain Ahead; Terrain Ahead"
Imminent Terrain Impact Caution (ITI)	TERRAIN	TERRAIN AHEAD or CAUTION - TERRAIN	"Terrain Ahead; Terrain Ahead" or "Caution, Terrain; Caution, Terrain"
Reduced Required Obstacle Clearance Caution (ROC)	TERRAIN	CAUTION - OBSTACLE or OBSTACLE AHEAD	"Caution, Obstacle; Caution, Obstacle" or "Obstacle Ahead; Obstacle Ahead"
Imminent Obstacle Impact Caution (IOI)	TERRAIN	OBSTACLE AHEAD or CAUTION - OBSTACLE	"Obstacle Ahead; Obstacle Ahead" or "Caution, Obstacle; Caution, Obstacle"
Premature Descent Alert Caution (PDA)	TERRAIN	TOO LOW - TERRAIN	"Too Low, Terrain"
Altitude Callout "500"	None	None	"Five-Hundred"
Excessive Descent Rate Caution (EDR)	TERRAIN	SINK RATE	"Sink Rate"

Alert Type	PFD/MFD TAWS-B Page Annunciation	MFD Pop-Up Alert	Aural Message
Negative Climb Rate Caution (NCR)	TERRAIN	DON'T SINK or TOO LOW – TERRAIN	"Don't Sink" or "Too Low, Terrain"

TAWS-B System Status Annunciations

Alert Type	PFD/MFD Alert Annunciation	TAWS-B Page Annunciation	Aural Message
System Test in Progress	TAWS TEST	TAWS TEST	None
System Test Pass	None	None	"TAWS System Test OK"
TAWS-B System Test Fail	TAWS FAIL	TAWS FAIL	"TAWS System Failure"
Terrain or Obstacle database unavailable or invalid, invalid software configuration, system audio fault	TAWS FAIL	TAWS FAIL	"TAWS System Failure"
MFD Terrain or Obstacle database unavailable or invalid. System operating with PFD Terrain or Obstacle databases	None	TERRAIN DATABASE FAILURE	None
No GPS position	TAWS N/A	NO GPS POSITION	"TAWS Not Available"
Excessively degraded GPS signal or out of database coverage area	TAWS N/A	None	"TAWS Not Available"
Sufficient GPS signal received after loss or database coverage area entered	None	None	"TAWS Available"

VOICE ALERTS

Voice Alert	Description
"Minimums, minimums"	The aircraft has descended below the preset barometric minimum descent altitude.
"Vertical track"	The aircraft is one minute from Top of Descent. Issued only when vertical navigation is enabled.
"Traffic"	Played when a Traffic Advisory (TA) is issued.
"Traffic Not Available"	The aircraft is outside the Traffic Information Service (TIS) coverage area.
"Traffic, Traffic"	Played when a Traffic Advisory (TA) is issued (TAS system).
"Traffic Advisory System Test Passed"	Played when the TAS system passes a pilot-initiated self test.
"Traffic Advisory System Test Failed"	Played when the TAS system fails a pilot-initiated self test.

MFD & PFD MESSAGE ADVISORIES

Message	Comments
DATA LOST – Pilot stored data was lost. Recheck settings.	The pilot profile data was lost. System reverts to default pilot profile and settings. The pilot may reconfigure the MFD & PFDs with preferred settings, if desired.
XTALK ERROR – A flight display crosstalk error has occurred.	The MFD and PFDs are not communicating with each other. The system should be serviced.
PFD1 SERVICE – PFD1 needs service. Return unit for repair.	The PFD and/or MFD self-test has detected a problem. The system should be serviced.
MFD1 SERVICE – MFD1 needs service. Return unit for repair.	
MANIFEST – PFD1 software mismatch, communication halted.	The PFD and/or MFD has incorrect software installed. The system should be serviced.
MANIFEST – MFD1 software mismatch, communication halted.	
PFD1 CONFIG – PFD1 config error. Config service req'd.	The PFD configuration settings do not match backup configuration memory. The system should be serviced.

MFD & PFD MESSAGE ADVISORIES (CONT.)

Message	Comments
MFD1 CONFIG – MFD1 config error. Config service req'd.	The MFD configuration settings do not match backup configuration memory. The system should be serviced.
SW MISMATCH – GDU software version mismatch. Xtalk is off.	The MFD and PFDs have different software versions installed. The system should be serviced.
PFD1 COOLING – PFD1 has poor cooling. Reducing power usage.	The PFD and/or MFD is overheating and is reducing power consumption by dimming the display. If problem persists, the system should be serviced.
MFD1 COOLING – MFD1 has poor cooling. Reducing power usage.	
PFD1 KEYSTK – PFD1 [key name] Key is stuck.	A key is stuck on the PFD and/or MFD bezel. Attempt to free the stuck key by pressing it several times. The system should be serviced if the problem persists.
MFD1 KEYSTK – MFD [key name] Key is stuck.	
CNFG MODULE – PFD1 configuration module is inoperative.	The PFD1 configuration module backup memory has failed. The system should be serviced.
PFD1 VOLTAGE – PFD1 has low voltage. Reducing power usage	The PFD1 voltage is low. The system should be serviced.
MFD1 VOLTAGE – MFD1 has low voltage. Reducing power usage	The MFD voltage is low. The system should be serviced.

DATABASE MESSAGE ADVISORIES

Message	Comments
MFD1 DB ERR – MFD1 navigation database error exists.	The MFD and/or PFD detected a failure in the navigation database. Attempt to reload the aviation database. If problem persists, the system should be serviced.
PFD1 DB ERR – PFD1 navigation database error exists.	
MFD1 DB ERR – MFD1 basemap database error exists.	The MFD and/or PFD detected a failure in the basemap database.
PFD1 DB ERR – PFD1 basemap database error exists.	

DATABASE MESSAGE ADVISORIES (CONT.)

Message	Comments
MFD1 DB ERR – MFD1 terrain database error exists.	The MFD and/or PFD detected a failure in the terrain database. Ensure that the terrain card is properly inserted in display. Replace terrain card. If problem persists, the system should be serviced.
PFD1 DB ERR – PFD1 terrain database error exists.	
MFD1 DB ERR – MFD1 terrain database missing.	The terrain database is present on another LRU, but is missing on the specified LRU.
PFD1 DB ERR – PFD1 terrain database missing.	
MFD1 DB ERR – MFD1 obstacle database error exists.	The MFD and/or PFD detected a failure in the obstacle database. Ensure that the data card is properly inserted. Replace data card. If problem persists, the system should be serviced.
PFD1 DB ERR – PFD1 obstacle database error exists.	
MFD1 DB ERR – MFD1 obstacle database missing.	The obstacle database is present on another LRU, but is missing on the specified LRU.
PFD1 DB ERR – PFD1 obstacle database missing.	
MFD1 DB ERR – MFD1 airport terrain database error exists.	The MFD and/or PFD detected a failure in the airport terrain database. Ensure that the data card is properly inserted. Replace data card. If problem persists, the system should be serviced.
PFD1 DB ERR – PFD1 airport terrain database error exists.	
MFD1 DB ERR – MFD1 airport terrain database missing.	The airport terrain database is present on another LRU, but is missing on the specified LRU.
PFD1 DB ERR – PFD1 airport terrain database missing.	
MFD1 DB ERR – MFD1 Safe Taxi database error exists.	The MFD and/or PFD detected a failure in the Safe Taxi database. Ensure that the data card is properly inserted. Replace data card. If problem persists, the system should be serviced.
PFD1 DB ERR – PFD1 Safe Taxi database error exists.	

DATABASE MESSAGE ADVISORIES (CONT.)

Message	Comments
MFD1 DB ERR – MFD1 Chartview database error exists.	The MFD detected a failure in the ChartView database (optional feature). Ensure that the data card is properly inserted. Replace data card. If problem persists, the system should be serviced.
MFD1 DB ERR – MFD1 FliteCharts database error exists.	The MFD detected a failure in the FliteCharts database (optional feature). Ensure that the data card is properly inserted. Replace data card. If problem persists, the system should be serviced.
MFD1 DB ERR – MFD1 Airport Directory database error exists.	The MFD and/or PFD detected a failure in the Airport Directory database. Ensure that the data card is properly inserted. Replace data card. If problem persists, the system should be serviced.
PFD1 DB ERR – PFD1 Airport Directory database error exists.	
MFD1 DB ERR – MFD1 multiple database errors exists.	The MFD and/or PFD detected a failure in more than one database. If problem persists, the system should be serviced.
PFD1 DB ERR – PFD1 multiple database errors exists.	
NAV DB UPDATED – Active navigation database updated.	System has updated the active navigation database from the standby navigation database.
DB MISMATCH – Navigation database mismatch. Xtalk is off.	The PFD and MFD have different navigation database versions or regions installed. Crossfill is off. Check the AUX-SYSTEM STATUS Page to determine versions or regions. Also, check the AUX-SYSTEM STATUS Page for a database synchronization function not completed. After synchronization is complete, power must be turned off, then on.

DATABASE MESSAGE ADVISORIES (CONT.)

Message	Comments
DB MISMATCH – Standby Navigation database mismatch.	The PFD and MFD have different standby navigation database versions or regions installed. Check the AUX-SYSTEM STATUS Page to determine versions or regions. Also, check the AUX-SYSTEM STATUS Page for a database synchronization function not completed. After synchronization is complete, power must be turned off, then on.
DB MISMATCH – Terrain database mismatch.	The PFD and MFD have different terrain database versions or regions installed. Check the AUX-SYSTEM STATUS Page to determine versions or regions. Also, check the AUX-SYSTEM STATUS Page for a database synchronization function not completed. After synchronization is complete, power must be turned off, then on.
DB MISMATCH – Obstacle database mismatch.	The PFD and MFD have different obstacle database versions or regions installed. Check the AUX-SYSTEM STATUS Page to determine versions or regions. Also, check the AUX-SYSTEM STATUS Page for a database synchronization function not completed. After synchronization is complete, power must be turned off, then on.
DB MISMATCH – Airport Terrain database mismatch.	The PFD and MFD have different airport terrain database versions or regions installed. Check the AUX-SYSTEM STATUS Page to determine versions or regions. Also, check the AUX-SYSTEM STATUS Page for a database synchronization function not completed. After synchronization is complete, power must be turned off, then on.
TERRAIN DSP – [PFD1, MFD1] Terrain awareness display unavailable.	One of the terrain, airport terrain, or obstacle databases required for TAWS in the specified PFD or MFD is missing or invalid.

GMA 1347 MESSAGE ADVISORIES

Message	Comments
GMA1 FAIL – GMA1 is inoperative.	The audio panel self-test has detected a failure. The audio panel is unavailable. The system should be serviced.
GMA1 CONFIG – GMA1 config error. Config service req'd.	The audio panel configuration settings do not match backup configuration memory. The system should be serviced.
MANIFEST – GMA1 software mismatch, communication halted.	The audio panel has incorrect software installed. The system should be serviced.
GMA1 SERVICE – GMA1 needs service. Return unit for repair.	The audio panel self-test has detected a problem in the unit. Certain audio functions may still be available, and the audio panel may still be usable. The system should be serviced when possible.

GIA 63 MESSAGE ADVISORIES

Message	Comments
GIA1 CONFIG – GIA1 config error. Config service req'd.	The GIA1 and/or GIA2 configuration settings do not match backup configuration memory. The system should be serviced.
GIA2 CONFIG – GIA2 config error. Config service req'd.	
GIA1 CONFIG – GIA1 audio config error. Config service req'd.	The GIA1 and/or GIA2 have an error in the audio configuration. The system should be serviced.
GIA2 CONFIG – GIA2 audio config error. Config service req'd.	
GIA1 COOLING – GIA1 temperature too low.	The GIA1 and/or GIA2 temperature is too low to operate correctly. Allow units to warm up to operating temperature.
GIA2 COOLING – GIA2 temperature too low.	
GIA1 COOLING – GIA1 over temperature.	The GIA1 and/or GIA2 temperature is too high. If problem persists, the system should be serviced.
GIA2 COOLING – GIA2 over temperature.	

GIA 63 MESSAGE ADVISORIES (CONT.)

Message	Comments
GIA1 SERVICE – GIA1 needs service. Return the unit for repair.	The GIA1 and/or GIA2 self-test has detected a problem in the unit. The system should be serviced.
GIA2 SERVICE – GIA2 needs service. Return the unit for repair.	
MANIFEST – GIA1 software mismatch, communication halted.	The GIA1 and/or GIA 2 has incorrect software installed. The system should be serviced.
MANIFEST – GIA2 software mismatch, communication halted.	
MANIFEST – GFC software mismatch, communication halted.	Incorrect servo software is installed, or gain settings are incorrect.
MANIFEST– COM1 software mismatch, communication halted.	COM1 and/or COM2 software mismatch. The system should be serviced.
MANIFEST– COM2 software mismatch, communication halted.	
MANIFEST– NAV1 software mismatch, communication halted.	NAV1 and/or NAV2 software mismatch. The system should be serviced.
MANIFEST– NAV2 software mismatch, communication halted.	
COM1 TEMP – COM1 over temp. Reducing transmitter power.	The system has detected an over temperature condition in COM1 and/or COM2. The transmitter is operating at reduced power. If the problem persists, the system should be serviced.
COM2 TEMP – COM2 over temp. Reducing transmitter power.	
COM1 SERVICE – COM1 needs service. Return unit for repair.	The system has detected a failure in COM1 and/or COM2. COM1 and/or COM2 may still be usable. The system should be serviced when possible.
COM2 SERVICE – COM2 needs service. Return unit for repair.	

GIA 63 MESSAGE ADVISORIES (CONT.)

Message	Comments
COM1 PTT – COM1 push-to-talk key is stuck.	The COM1 and/or COM2 external push-to-talk switch is stuck in the enable (or "pressed") position. Press the PTT switch again to cycle its operation. If the problem persists, the system should be serviced.
COM2 PTT – COM2 push-to-talk key is stuck.	
COM1 RMT XFR – COM1 remote transfer key is stuck.	The COM1 and/or COM2 transfer switch is stuck in the enabled (or "pressed") position. Press the transfer switch again to cycle its operation. If the problem persists, the system should be serviced.
COM2 RMT XFR – COM2 remote transfer key is stuck.	
COM1 CONFIG – COM1 config error. Config service req'd.	The COM1 and/or COM2 configuration settings do not match backup configuration memory. The system should be serviced.
COM2 CONFIG – COM2 config error. Config service req'd.	
RAIM UNAVAIL – RAIM is not available from FAF to MAP waypoints.	GPS satellite coverage is insufficient to perform Receiver Autonomous Integrity Monitoring (RAIM) from the FAF to the MAP waypoints.
LOI – GPS integrity lost. Crosscheck with other NAVS.	Loss of GPS integrity monitoring.
GPS NAV LOST – Loss of GPS navigation. Insufficient satellites.	Loss of GPS navigation due to insufficient satellites.
GPS NAV LOST – Loss of GPS navigation. Position error.	Loss of GPS navigation due to position error.
GPS NAV LOST – Loss of GPS navigation. GPS fail.	Loss of GPS navigation due to GPS failure.
ABORT APR – Loss of GPS navigation. Abort approach.	Abort approach due to loss of GPS navigation.
TRUE APR – True north approach. Change hdg reference to TRUE.	Displayed after passing the first waypoint of a true north approach when the nav angle is set to 'AUTO'.

GIA 63 MESSAGE ADVISORIES (CONT.)

Message	Comments
GPS1 FAIL – GPS1 is inoperative.	A failure has been detected in the GPS1 and/or GPS2 receiver. The receiver is unavailable. The system should be serviced.
GPS2 FAIL – GPS2 is inoperative.	
GPS1 SERVICE – GPS1 needs service. Return unit for repair.	A failure has been detected in the GPS1 and/ or GPS2 receiver. The receiver may still be available. The system should be serviced.
GPS2 SERVICE – GPS2 needs service. Return unit for repair.	
NAV1 SERVICE – NAV1 needs service. Return unit for repair.	A failure has been detected in the NAV1 and/ or NAV2 receiver. The receiver may still be available. The system should be serviced.
NAV2 SERVICE – NAV2 needs service. Return unit for repair.	
NAV1 RMT XFR – NAV1 remote transfer key is stuck.	The remote NAV1 and/or NAV2 transfer switch is stuck in the enabled (or "pressed") state. Press the transfer switch again to cycle its operation. If the problem persists, the system should be serviced.
NAV2 RMT XFR – NAV2 remote transfer key is stuck.	
G/S1 FAIL – G/S1 is inoperative.	A failure has been detected in glideslope receiver 1 and/or receiver 2. The system should be serviced.
G/S2 FAIL – G/S2 is inoperative.	
G/S1 SERVICE – G/S1 needs service. Return unit for repair.	A failure has been detected in glideslope receiver 1 and/or receiver 2. The receiver may still be available. The system should be serviced when possible.
G/S2 SERVICE – G/S2 needs service. Return unit for repair.	

GIA 63W MESSAGE ADVISORIES

Message	Comments
GIA1 CONFIG – GIA1 config error. Config service req'd.	The GIA1 and/or GIA2 configuration settings do not match backup configuration memory. The system should be serviced.
GIA2 CONFIG – GIA2 config error. Config service req'd.	

GIA 63W MESSAGE ADVISORIES (CONT.)

Message	Comments
GIA1 CONFIG – GIA1 audio config error. Config service req'd.	The GIA1 and/or GIA2 have an error in the audio configuration. The system should be serviced.
GIA2 CONFIG – GIA2 audio config error. Config service req'd.	
GIA1 COOLING – GIA1 temperature too low.	The GIA1 and/or GIA2 temperature is too low to operate correctly. Allow units to warm up to operating temperature.
GIA2 COOLING – GIA2 temperature too low.	
GIA1 COOLING – GIA1 over temperature.	The GIA1 and/or GIA2 temperature is too high. If problem persists, the system should be serviced.
GIA2 COOLING – GIA2 over temperature.	
GIA1 SERVICE – GIA1 needs service. Return the unit for repair.	The GIA1 and/or GIA2 self-test has detected a problem in the unit. The system should be serviced.
GIA2 SERVICE – GIA2 needs service. Return the unit for repair.	
HW MISMATCH – GIA hardware mismatch. GIA1 communication halted.	A GIA mismatch has been detected, where only one is SBAS capable.
HW MISMATCH – GIA hardware mismatch. GIA2 communication halted.	
MANIFEST – GIA1 software mismatch, communication halted.	The GIA1 and/or GIA 2 has incorrect software installed. The system should be serviced.
MANIFEST – GIA2 software mismatch, communication halted.	
MANIFEST – GFC software mismatch, communication halted.	Incorrect servo software is installed, or gain settings are incorrect.

GIA 63W MESSAGE ADVISORIES (CONT.)

Message	Comments
MANIFEST– COM1 software mismatch, communication halted.	COM1 and/or COM2 software mismatch. The system should be serviced.
MANIFEST– COM2 software mismatch, communication halted.	
MANIFEST– NAV1 software mismatch, communication halted.	NAV1 and/or NAV2 software mismatch. The system should be serviced.
MANIFEST– NAV2 software mismatch, communication halted.	
COM1 TEMP – COM1 over temp. Reducing transmitter power.	The system has detected an over temperature condition in COM1 and/or COM2. The transmitter is operating at reduced power. If the problem persists, the system should be serviced.
COM2 TEMP – COM2 over temp. Reducing transmitter power.	
COM1 SERVICE – COM1 needs service. Return unit for repair.	The system has detected a failure in COM1 and/or COM2. COM1 and/or COM2 may still be usable. The system should be serviced when possible.
COM2 SERVICE – COM2 needs service. Return unit for repair.	
COM1 PTT – COM1 push-to-talk key is stuck.	The COM1 and/or COM2 external push-to-talk switch is stuck in the enable (or "pressed") position. Press the PTT switch again to cycle its operation. If the problem persists, the system should be serviced.
COM2 PTT – COM2 push-to-talk key is stuck.	
COM1 RMT XFR – COM1 remote transfer key is stuck.	The COM1 and/or COM2 transfer switch is stuck in the enabled (or "pressed") position. Press the transfer switch again to cycle its operation. If the problem persists, the system should be serviced.
COM2 RMT XFR – COM2 remote transfer key is stuck.	
COM1 CONFIG – COM1 config error. Config service req'd.	The COM1 and/or COM2 configuration settings do not match backup configuration memory. The system should be serviced.
COM2 CONFIG – COM2 config error. Config service req'd.	

GIA 63W MESSAGE ADVISORIES (CONT.)

Message	Comments
LOI – GPS integrity lost. Crosscheck with other NAVS.	GPS integrity is insufficient for the current phase of flight.
GPS NAV LOST – Loss of GPS navigation. Insufficient satellites.	Loss of GPS navigation due to insufficient satellites.
GPS NAV LOST – Loss of GPS navigation. Position error.	Loss of GPS navigation due to position error.
GPS NAV LOST – Loss of GPS navigation. GPS fail.	Loss of GPS navigation due to GPS failure.
ABORT APR – Loss of GPS navigation. Abort approach.	Abort approach due to loss of GPS navigation.
APR DWNGRADE – Approach downgraded.	Vertical guidance generated by SBAS is unavailable, use LNAV only minimums.
TRUE APR – True north approach. Change HDG reference to TRUE.	Displayed after passing the first waypoint of a true north approach when the nav angle is set to 'AUTO'.
GPS1 SERVICE – GPS1 needs service. Return unit for repair.	A failure has been detected in the GPS1 and/or GPS2 receiver. The receiver may still be available. The system should be serviced.
GPS2 SERVICE – GPS2 needs service. Return unit for repair.	
NAV1 SERVICE – NAV1 needs service. Return unit for repair.	A failure has been detected in the NAV1 and/or NAV2 receiver. The receiver may still be available. The system should be serviced.
NAV2 SERVICE – NAV2 needs service. Return unit for repair.	
NAV1 RMT XFR – NAV1 remote transfer key is stuck.	The remote NAV1 and/or NAV2 transfer switch is stuck in the enabled (or "pressed") state. Press the transfer switch again to cycle its operation. If the problem persists, the system should be serviced.
NAV2 RMT XFR – NAV2 remote transfer key is stuck.	
G/S1 FAIL – G/S1 is inoperative.	A failure has been detected in glideslope receiver 1 and/or receiver 2. The system should be serviced.
G/S2 FAIL – G/S2 is inoperative.	

GIA 63W MESSAGE ADVISORIES (CONT.)

Message	Comments
G/S1 SERVICE – G/S1 needs service. Return unit for repair.	A failure has been detected in glideslope receiver 1 and/or receiver 2. The receiver may still be available. The system should be serviced when possible.
G/S2 SERVICE – G/S2 needs service. Return unit for repair.	
FAILED PATH – A data path has failed.	A data path connected to the GDU or the GIA 63/W has failed

GEA 71 MESSAGE ADVISORIES

Message	Comments
GEA1 CONFIG – GEA1 config error. Config service req'd.	The GEA1 configuration settings do not match those of backup configuration memory. The system should be serviced.
MANIFEST – GEA1 software mismatch, communication halted.	The #1 GEA 71 has incorrect software installed. The system should be serviced.

GTX 33 MESSAGE ADVISORIES

Message	Comments
XPDR1 CONFIG – XPDR1 config error. Config service req'd.	The transponder configuration settings do not match those of backup configuration memory. The system should be serviced.
MANIFEST – GTX1 software mismatch, communication halted.	The transponder has incorrect software installed. The system should be serviced.
XPDR1 SRVC – XPDR1 needs service. Return unit for repair.	The #1 transponder should be serviced when possible.
XPDR1 FAIL – XPDR1 is inoperative.	There is no communication with the #1 transponder.

GRS 77 MESSAGE ADVISORIES

Message	Comments
AHRS1 TAS – AHRS1 not receiving valid airspeed.	The #1 AHRS is not receiving true airspeed from the air data computer. The AHRS relies on GPS information to augment the lack of airspeed. The system should be serviced.
AHRS1 GPS – AHRS1 using backup GPS source.	The #1 AHRS is using the backup GPS path. Primary GPS path has failed. The system should be serviced when possible.
AHRS1 GPS – AHRS1 not receiving any GPS information.	The #1 AHRS is not receiving any or any useful GPS information. Check AFMS limitations. The system should be serviced.
AHRS1 GPS – AHRS1 not receiving backup GPS information.	The #1 AHRS is not receiving backup GPS information. The system should be serviced.
AHRS1 GPS – AHRS1 operating exclusively in no-GPS mode.	The #1 AHRS is operating exclusively in no-GPS mode. The system should be serviced.
AHRS1 SRVC – AHRS1 Magnetic-field model needs update.	The #1 AHRS earth magnetic field model is out of date. Update magnetic field model when practical.
GEO LIMITS – AHRS1 too far North/South, no magnetic compass.	The aircraft is outside geographical limits for approved AHRS operation. Heading is flagged as invalid.
MANIFEST – GRS1 software mismatch, communication halted.	The #1 AHRS has incorrect software installed. The system should be serviced.

GMU 44 MESSAGE ADVISORIES

Message	Comments
HDG FAULT – AHRS1 magnetometer fault has occurred.	A fault has occurred in the #1 GMU 44. Heading is flagged as invalid. The AHRS uses GPS for backup mode operation. The system should be serviced.
MANIFEST – GMU1 software mismatch, communication halted.	The GMU 44 has incorrect software installed. The system should be serviced.

GDL 69A MESSAGE ADVISORIES

Message	Comments
GDL69 CONFIG – GDL 69 config error. Config service req'd.	GDL 69 configuration settings do not match those of backup configuration memory. The system should be serviced.
GDL69 FAIL – GDL 69 has failed.	A failure has been detected in the GDL 69. The receiver is unavailable. The system should be serviced
MANIFEST – GDL software mismatch, communication halted.	The GDL 69 has incorrect software installed. The system should be serviced.

GDC 74A MESSAGE ADVISORIES

Message	Comments
MANIFEST – GDC1 software mismatch, communication halted.	The GDC 74A has incorrect software installed. The system should be serviced.

GCU 476 MESSAGE ADVISORIES

Message	Comments
GCU CNFG – GCU Config error. Config service req'd.	GCU 476 configuration settings do not match those of backup configuration memory. The system should be serviced.
GCU FAIL – GCU is inoperative.	A failure has been detected in the GCU 476. The GCU 476 is unavailable.
MANIFEST – GCU software mismatch, communication halted.	The GCU 476 has incorrect software installed. The G1000 system should be serviced.
GCU KEYSTK – GCU [key name] Key is stuck.	A key is stuck on the GCU 476 bezel. Attempt to free the stuck key by pressing it several times. The system should be serviced if the problem persists.

MISCELLANEOUS MESSAGE ADVISORIES

Message	Comments
FPL WPT LOCK – Flight plan waypoint is locked.	Upon power-up, the system detects that a stored flight plan waypoint is locked. This occurs when an aviation database update eliminates an obsolete waypoint. The flight plan cannot find the specified waypoint and flags this message. This can also occur with user waypoints in a flight plan that is deleted. Remove the waypoint from the flight plan if it no longer exists in any database, Or: update the waypoint name/identifier to reflect the new information.
FPL WPT MOVE – Flight plan waypoint moved.	The system has detected that a waypoint coordinate has changed due to a new aviation database update. Verify that stored flight plans contain correct waypoint locations.
TIMER EXPIRD – Timer has expired.	The system notifies the pilot that the timer has expired.
DB CHANGE – Database changed. Verify user modified procedures.	This occurs when a stored flight plan contains procedures that have been manually edited. This alert is issued only after an aviation database update. Verify that the user-modified procedures in stored flight plans are correct and up to date.
DB CHANGE – Database changed. Verify stored airways.	This occurs when a stored flight plan contains an airway that is no longer consistent with the aviation database. This alert is issued only after an aviation database update. Verify use of airways in stored flight plans and reload airways as needed.

MISCELLANEOUS MESSAGE ADVISORIES (CONT.)

Message	Comments
FPL TRUNC – Flight plan has been truncated.	This occurs when a newly installed aviation database eliminates an obsolete approach or arrival used by a stored flight plan. The obsolete procedure is removed from the flight plan. Update flight plan with current arrival or approach.
LOCKED FPL – Cannot navigate locked flight plan.	This occurs when the pilot attempts to activate a stored flight plan that contains locked waypoint. Remove locked waypoint from flight plan. Update flight plan with current waypoint.
WPT ARRIVAL – Arriving at waypoint -[xxxx]	Arriving at waypoint [xxxx], where [xxxx] is the waypoint name.
STEEP TURN – Steep turn ahead.	A steep turn is 15 seconds ahead. Prepare to turn.
INSIDE ARSPC – Inside airspace.	The aircraft is inside the airspace.
ARSPC AHEAD – Airspace ahead less than 10 minutes.	Special use airspace is ahead of aircraft. The aircraft will penetrate the airspace within 10 minutes.
ARSPC NEAR – Airspace near and ahead.	Special use airspace is near and ahead of the aircraft position.
ARSPC NEAR – Airspace near – less than 2 nm.	Special use airspace is within 2 nm of the aircraft position.
APR INACTV – Approach is not active.	The system notifies the pilot that the loaded approach is not active. Activate approach when required.
SLCT FREQ – Select appropriate frequency for approach.	The system notifies the pilot to load the approach frequency for the appropriate NAV receiver. Select the correct frequency for the approach.
SLCT NAV – Select NAV on CDI for approach.	The system notifies the pilot to set the CDI to the correct NAV receiver. Set the CDI to the correct NAV receiver.

MISCELLANEOUS MESSAGE ADVISORIES (CONT.)

Message	Comments
PTK FAIL – Parallel track unavailable: bad geometry.	Bad parallel track geometry.
PTK FAIL – Parallel track unavailable: invalid leg type.	Invalid leg type for parallel offset.
PTK FAIL – Parallel track unavailable: past IAF.	IAF waypoint for parallel offset has been passed.
UNABLE V WPT – Can't reach current vertical waypoint.	The current vertical waypoint can not be reached within the maximum flight path angle and vertical speed constraints. The system automatically transitions to the next vertical waypoint.
VNV – Unavailable. Unsupported leg type in flight plan.	The lateral flight plan contains a procedure turn, vector, or other unsupported leg type prior to the active vertical waypoint. This prevents vertical guidance to the active vertical waypoint.
VNV – Unavailable. Excessive track angle error.	The current track angle error exceeds the limit, causing the vertical deviation to go invalid.
VNV – Unavailable. Excessive crosstrack error.	The current crosstrack exceeds the limit, causing vertical deviation to go invalid.
VNV – Unavailable. Parallel course selected.	A parallel course has been selected, causing the vertical deviation to go invalid.
NON WGS84 WPT – Do not use GPS navigation to [xxxx].	The position of the selected waypoint [xxxx] is not calculated based on the WGS84 map reference datum and may be positioned in error as displayed. Do not use GPS to navigate to the selected non-WGS84 waypoint.
TRAFFIC FAIL – Traffic device has failed.	The system is no longer receiving data from the traffic system. The traffic device should be serviced.
FAILED PATH – A data path has failed.	A data path connected to the GDU or the GIA 63/W has failed.

MISCELLANEOUS MESSAGE ADVISORIES (CONT.)

Message	Comments
SRMSCP FAIL – Stormscope has failed	Stormscope has failed. The system should be serviced.
MAG VAR WARN – Large magnetic variance. Verify all course angles.	The GDU's internal model cannot determine the exact magnetic variance for geographic locations near the magnetic poles. Displayed magnetic course angles may differ from the actual magnetic heading by more than 2°.
SVS – SVS DISABLED: Out of available terrain region.	Synthetic Vision is disabled because the aircraft is not within the boundaries of the installed terrain database.
SVS – SVS DISABLED: Terrain DB resolution too low.	Synthetic Vision is disabled because a terrain database of sufficient resolution (9 arc-second or better) is not currently installed.
SCHEDULER [#] – <message>.	Message criteria entered by the user.
CHECK CRS – Database course for LOC1 / [LOC ID] is [CRS]°.	Selected course for LOC1 differs from published localizer course by more than 10 degrees.
CHECK CRS – Database course for LOC2 / [LOC ID] is [CRS]°.	Selected course for LOC2 differs from published localizer course by more than 10 degrees.
[PFD1 or MFD1] CARD 1 REM – Card 1 was removed. Reinsert card.	The SD card was removed from the top card slot of the PFD or MFD. The SD card needs to be reinserted.
[PFD1 or MFD1] CARD 2 REM – Card 2 was removed. Reinsert card.	The SD card was removed from the bottom card slot of the PFD or MFD. The SD card needs to be reinserted.
[PFD1 or MFD1] CARD 1 ERR – Card 1 is invalid.	The SD card in the top card slot of the PFD or MFD contains invalid data.
[PFD1 or MFD1] CARD 2 ERR – Card 2 is invalid.	The SD card in the bottom card slot of the PFD or MFD contains invalid data.
TRN AUD FAIL – Trn Awareness audio source unavailable.	The audio source for terrain awareness is offline. Check GIA 1 or GIA 2.
TERRAIN AUD CFG – Trn Awareness audio config error. Service req'd.	Terrain audio alerts are not configured properly. The system should be serviced.

FLIGHT PLAN IMPORT/EXPORT MESSAGES

In some circumstances, some messages may appear in conjunction with others.

Flight Plan Import/Export Results	Description
'Flight plan successfully imported.'	A flight plan file stored on the SD card was successfully imported as a stored flight plan.
'File contained user waypoints only. User waypoints imported successfully. No stored flight plan data was modified.'	The file stored on the SD card did not contain a flight plan, only user waypoints. These waypoints have been saved to the system user waypoints. No flight plans stored in the system have been modified.
'No flight plan files found to import.'	The SD card contains no flight plan data.
'Flight plan import failed.'	Flight plan data was not successfully imported from the SD card.
'Flight plan partially imported.'	Some flight plan waypoints were successfully imported from the SD card, however others had errors and were not imported. A partial stored flight plan now exists in the system.
'File contained user waypoints only.'	The file stored on the SD card did not contain a flight plan, only user waypoints. One or more of these waypoints did not import successfully.
'Too many points. Flight plan truncated.'	The flight plan on the SD card contains more waypoints than the system can support. The flight plan was imported with as many waypoints as possible.
'Some waypoints not loaded. Waypoints locked.'	The flight plan on the SD card contains one or more waypoints that the system cannot find in the navigation database. The flight plan has been imported, but must be edited within the system before it can be activated for use.

FLIGHT PLAN IMPORT/EXPORT MESSAGES (CONT.)

Flight Plan Import/Export Results	Description
'User waypoint database full. Not all loaded.'	The flight plan file on the SD card contains user waypoints. The quantity of stored user waypoints has exceeded system capacity, therefore not all the user waypoints on the SD card have been imported. Any flight plan user waypoints that were not imported are locked in the flight plan. The flight plan must be edited within the system before it can be activated for use.
'One or more user waypoints renamed.'	One or more imported user waypoints were renamed when imported due to naming conflicts with waypoints already existing in the system.
'Flight plan successfully exported.'	The stored flight plan was successfully exported to the SD card.
'Flight plan export failed.'	The stored flight plan was not successfully exported to the SD card. The SD card may not have sufficient available memory or the card may have been removed prematurely.

APPENDIX

PFD SOFTKEY MAP

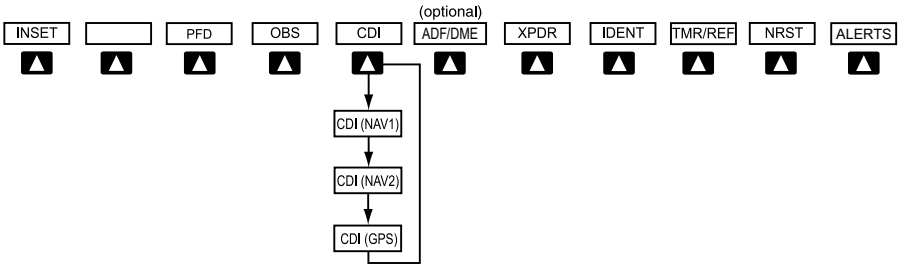

Top Level PFD Softkeys

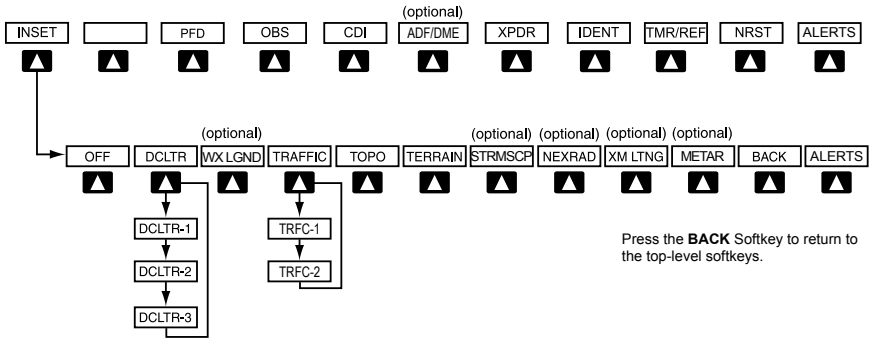

Inset Map Softkeys

Level 1	Level 2	Level 3	Description
INSET			Displays Inset Map in PFD lower left corner
	OFF		Removes Inset Map
	DCLTR (3)		Selects desired amount of map detail; cycles through declutter levels: DCLTR (No Declutter): All map features visible DCLTR-1: Declutters land data DCLTR-2: Declutters land and SUA data DCLTR-3: Removes everything except the active flight plan

Level 1	Level 2	Level 3	Description
	WX LGND		Displays icon and age on the Inset Map for the selected weather products (optional)
	TRAFFIC		Cycles through traffic display options: TRFC-1: Traffic displayed on inset map TRFC-2: Traffic Map Page is displayed in the inset map window
	TOPO		Displays topographical data (e.g., coast-lines, terrain, rivers, lakes) and elevation scale on Inset Map
	TERRAIN		Displays terrain information on Inset Map
	STRMSCP		Displays Stormscope lightning data on the Inset Map within a 200 nm radius of the aircraft (optional)
	NEXRAD		Displays NEXRAD weather and coverage information on Inset Map (optional feature)
	XM LTNG		Displays XM lightning information on Inset Map (optional)
	METAR		Displays METAR flags on airport symbols shown on the Inset Map (optional)

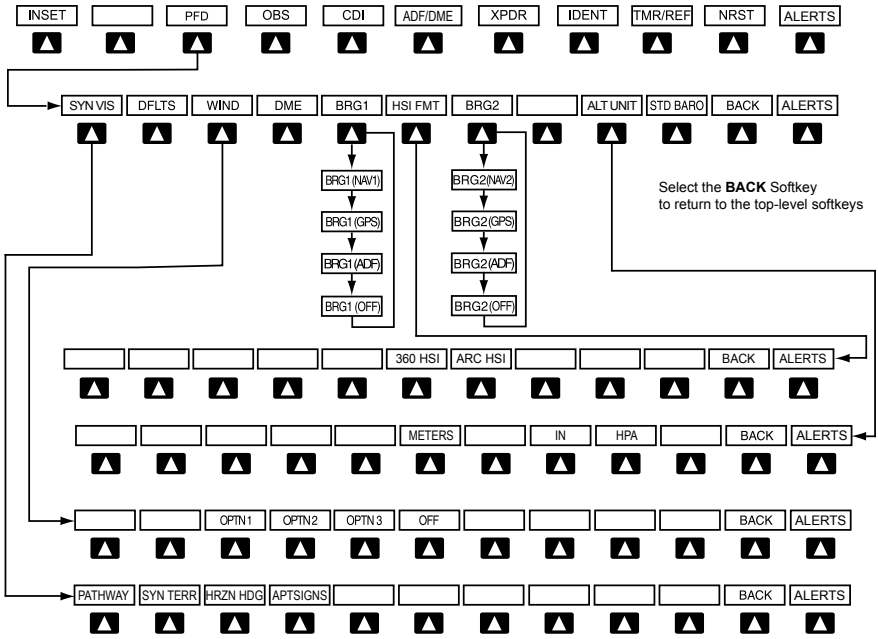

PFD Configuration Softkeys

Level 1	Level 2	Level 3	Description
PFD			Displays second-level softkeys for additional PFD configurations
	SYN VIS		Displays the softkeys for enabling or disabling Synthetic Vision features
		PATHWAY	Displays rectangular boxes representing the horizontal and vertical flight path of the active flight plan
		SYN TERR	Enables synthetic terrain depiction
		HRZN HDG	Displays compass heading along the Zero-Pitch line

Level 1	Level 2	Level 3	Description
		APTSIGNS	Displays position markers for airports within approximately 15 nm of the current aircraft position. Airport identifiers are displayed when the airport is within approximately 9 nm.
	DFLTS		Resets PFD to default settings, including changing units to standard
	WIND		Displays softkeys to select wind data parameters
		OPTN 1	Wind direction arrows with headwind and crosswind components
		OPTN 2	Wind direction arrow and speed
		OPTN 3	Wind direction arrow with headwind/ tailwind and crosswind components
		OFF	Information not displayed
	DME		Displays the DME Information Window
	BRG1		Cycles the Bearing 1 Information Window through NAV1 or GPS/waypoint identifier and GPS-derived distance information, and ADF/frequency.
	HSI FRMT		Displays the HSI formatting softkeys
		360 HSI	Displays the HSI in a 360 degree format
		ARC HSI	Displays the HSI in an arc format
	BRG2		Cycles the Bearing 2 Information Window through NAV2 or GPS/waypoint identifier and GPS-derived distance information, and ADF/frequency.
	ALT UNIT		Displays softkeys for setting the altimeter and BARO settings to metric units
		METERS	When enabled, displays altimeter in meters
		IN	Select to display the BARO setting as inches of mercury

Level 1	Level 2	Level 3	Description
		HPA	Select to display the BARO setting as hectopacals
	STD BARO		Sets barometric pressure to 29.92 in Hg (1013 hPa)

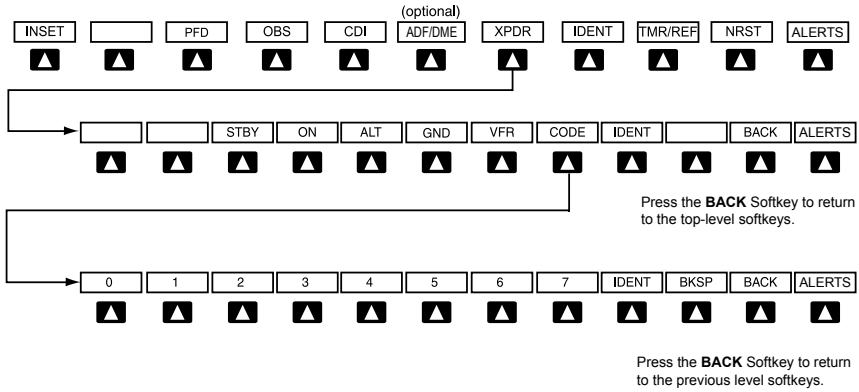

Transponder Softkeys

Level 1	Level 2	Level 3	Description
XPDR			Displays transponder mode selection softkeys
	STBY		Selects Standby Mode (transponder does not reply to any interrogations)
	ON		Selects Mode A (transponder replies to interrogations)
	ALT		Selects Mode C – Altitude Reporting Mode (transponder replies to identification and altitude interrogations)
	GND		Manually selects Ground Mode, the transponder does not allow Mode A and Mode C replies, but it does permit acquisition squitter and replies to discretely addressed Mode S interrogations.
	VFR		Automatically enters the VFR code (1200 in the U.S.A. only)
	CODE		Displays transponder code selection soft-keys 0-7
		0 — 7	Use numbers to enter code
		BKSP	Removes numbers entered, one at a time
IDENT			Activates the Special Position Identification (SPI) pulse for 18 seconds, identifying the transponder return on the ATC screen
TMR/REF			Displays Timer/References Window
NRST			Displays Nearest Airports Window
ALERTS			Displays Alerts Window

MFD SOFTKEY MAP

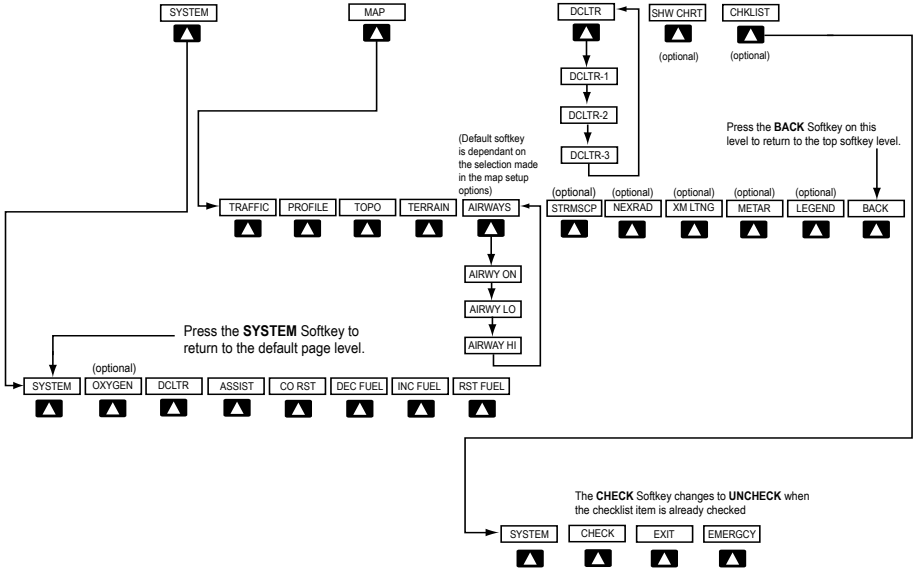

MFD Softkeys

Level 1	Level 2	Description
SYSTEM		Access the EIS functions
	SYSTEM	Returns to the top-level EIS display
	OXYGEN	Turns the oxygen system on or off (optional)
	DCLTR	Cycles the EGT and CHT cylinder temperatures on and off
	ASSIST	Accesses the Engine Leaning Assist Mode
	CO RST	Resets the CO Guardian and acknowledges an alert
	DEC FUEL	Decreases the gallons of fuel remaining (GAL REM) in 1-gallon increments
	INC FUEL	Increases the gallons of fuel remaining (GAL REM) in 1-gallon increments
	RST FUEL	Resets the fuel remaining to 98 or 102 gallons
MAP		Enables second-level Navigation Map softkeys
	TRAFFIC	Displays traffic information on Navigation Map

Level 1	Level 2	Description
	PROFILE	Displays/removes Profile View on Navigation Map Page
	TOPO	Displays topographical data (e.g., coastlines, terrain, rivers, lakes) and elevation scale on Navigation Map
	TERRAIN	Displays terrain information on Navigation Map
	AIRWAYS	Displays airways on the map; cycles through the following: AIRWAYS: No airways are displayed AIRWY ON: All airways are displayed AIRWY LO: Only low altitude airways are displayed AIRWY HI: Only high altitude airways are displayed
	STRMSCP	Press to display the Stormscope lightning data on the Inset Map (within a 200 nm radius of the aircraft)
	NEXRAD	Displays NEXRAD weather and coverage information on Navigation Map (optional)
	XM LTNG	Displays XM lightning information on Navigation Map (optional)
	METAR	Displays METAR flags on airport symbols shown on the Inset Map (optional)
	LEGEND	Displays the legend for the selected weather products. Available only when NEXRAD, XM LTNG, and/or METAR softkeys are selected.
	BACK	Returns to top-level softkeys
DCLTR (3)		Selects desired amount of map detail; cycles through declutter levels: DCLTR (No Declutter): All map features visible DCLTR-1: Declutters land data DCLTR-2: Declutters land and SUA data DCLTR-3: Removes everything except the active flight plan

Level 1	Level 2	Description
SHW CHRT		When available, displays optional airport and terminal procedure charts
CHKLIST		When available, displays optional checklists
	CHECK	Pressing this softkey checks off a checklist item. If an item is already checked, an **UNCHECK** Softkey is displayed.
	EXIT	Press to exit the checklist
	EMERGCY	Press to display the emergency checklist

LOADING UPDATED DATABASES

CAUTION: *Never disconnect power to the system when loading a database. Power interruption during the database loading process could result in maintenance being required to reboot the system.*

NOTE: *When loading database updates, the 'DB Mismatch' message will be displayed until database synchronization is complete, followed by turning system power off, then on. Synchronization can be monitored on the AUX-SYSTEM STATUS Page.*

In some cases it may be necessary to obtain an unlock code from Garmin in order to make the database product functional. It may also be necessary to have the system configured by a Garmin authorized service facility in order to use some database features.

If an error occurs during synchronization, an error message will be displayed, followed by the affected display in the Sync Status section of the Database Window. If synchronization completes on one display, but an error occurs on another, the error message will be displayed with the affected displays listed after it. When an error message is displayed, the problem must be corrected before synchronization can be completed. A power cycle is required to restart synchronization when 'Card Full' or 'Err' is shown.

Error Message	Description
Canceled	Database synchronization has been canceled by removing the bottom SD card in display being updated
Card Full	SD card does not contain sufficient memory
Err	Displayed for all other errors that may cause the synchronization process to be halted
Timeout	System timed-out prior to the database transfer completing

Loading Garmin Database Updates

1) With system power OFF, remove the MFD database card from the bottom card slot of the MFD.

2) Update the Garmin databases on the MFD card.

3) Insert the MFD database card into the bottom card slot of the MFD.

4) Apply power to the system, check that the databases are initialized and displayed on the power-up screen. When updating the terrain and FliteCharts databases, a 'Verifying' message may be seen. If this message is present, wait for the system to finish loading before proceeding to step 5.

5) Acknowledge the Power-up Page agreement by pressing the **ENT** Key or the right most softkey.

6) Turn the large **FMS** Knob to select the AUX Page group on the MFD.

7) Turn the small **FMS** Knob to select the System Status Page.

8) Monitor the Sync Status in the Database Window. Wait for all databases to complete synching, indicated by 'Complete' being displayed.

9) Remove and reapply power to the system.

10) Turn the large **FMS** Knob to select the AUX Page group on the MFD.

11) Turn the small **FMS** Knob to select the System Status Page.

12) Press the Display Database Selection Softkey to show database information for each display (**MFD1 DB**, **PFD1 DB, PFD2 DB**). Verify the correct database cycle information is shown for each database for each display.

Loading the Active Navigation Database

The Navigation Database that is loaded to internal memory as the active database will be used by the system.

NOTE: *Loading the Navigation Database as the active database prior to its effective date will result in the expiration date on the power-up screen and the effective date on the AUX-System Status Page being displayed in yellow.*

NOTE: *After the navigation database is loaded or copied, the top SD card may be removed.*

1) With the system OFF, insert the SD card containing the new navigation database version into the top card slot of the display (PFD1 or MFD) to be updated (label of SD card facing left).

2) Turn the system ON. A prompt is displayed in the upper left corner of the display:

3) Press the **NO** Softkey to proceed to loading the active database.

4) A prompt similar to the following is displayed. Press the **YES** Softkey to update the active navigation database.

5) After the update completes, the display starts in normal mode.

6) Turn the system OFF and remove the SD card from the top card slot.

7) Repeat steps 1 through 6 for the other displays (PFD1 or MFD).

8) Apply power to the system and press the **ENT** Key to acknowledge the startup screen.

9) Turn the large **FMS** Knob to select the AUX Page group on the MFD.

10) Turn the small **FMS** Knob to select the System Status Page.

11) Press the Display Database Selection Softkey to show active navigation database information for each display (**MFD1 DB**, **PFD1 DB**). Verify the correct active navigation database cycle information is shown for each display.

Loading the Standby Navigation Database

The purpose of the Standby Navigation Database is to allow the loading of the next cycle of the Navigation Database to the bottom SD card, prior to its effective date. (The Navigation Database is available seven days prior to its effective date.)

NOTE: *After the navigation database is loaded or copied, the top SD card may be removed.*

1) With the system OFF, insert the SD card containing the new navigation database version into the top card slot of the MFD.
2) Verify that an SD card is inserted in the bottom slot of each PFD and the MFD.
3) Turn the system ON. A prompt is displayed.
4) Press the **YES** Softkey. The navigation database is copied to the SD card in the bottom card slot of the MFD.
5) After the navigation database files are copied to the bottom SD card, press any key to verify, as instructed.
6) After database verification is complete, press any key to continue as instructed on the display.
7) Press the **NO** Softkey. The display now starts in normal mode. Since the database effective date is not yet valid, it should not be loaded as the active database. The display now starts in normal mode. Do not remove power while the display is starting.
8) Press the **ENT** Key to acknowledge the startup screen.
9) Turn the large **FMS** Knob to select the AUX Page group on the MFD.
10) Turn the small **FMS** Knob to select the System Status Page.
11) The new database is copied to the SD card in the bottom card slot of each PFD. Progress can be monitored in the SYNC STATUS field. When copying is finished, 'Complete' is displayed.

NOTE: *During the synchronization process, version differences between standby navigation databases will exist. This will result in the system displaying a 'DB Mismatch' alert for the standby navigation databases. This alert will remain until the next power cycle.*

12) Turn system power OFF.

13) Remove the SD card from the top card slot of the MFD.

14) Turn system power ON.

15) Press the **ENT** Key to acknowledge the startup screen.

16) Turn the large **FMS** Knob to select the AUX Page group on the MFD.

17) Turn the small **FMS** Knob to select the System Status Page.

18) Press the Display Database Selection Softkey to show standby navigation database information for each display (**MFD1 DB**, **PFD1 DB**). Verify the correct standby navigation database cycle information is shown for each display.

Magnetic Field Variation Database Update

At startup, the system compares this version of the MV DB with that presently being used by each AHRS (GRS1 and GRS2). If the system determines the MV DB needs to be updated, a prompt is displayed on the Navigation Map Page, as shown in the following figure. Note, in the following example, GRS1 is the first AHRS to indicate an update is available. In actuality, this is dependent on which AHRS is the first to report status to the system. GRS2 may be displayed before GRS1. The order is not important, only that both AHRS be updated.

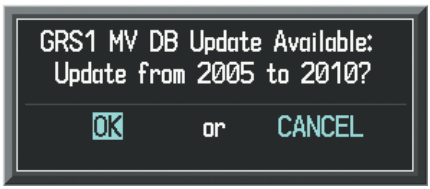

GRS1 Magnetic Field Variation Database Update Prompt

Loading the magnetic field variation database update:

1) With 'OK' highlighted, as shown in the previous figure, press the **ENT** Key on the MFD. A progress monitor is displayed as shown in the following figure.

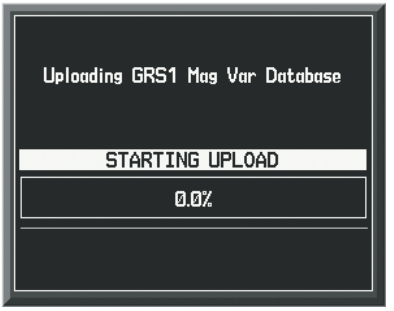

Uploading Database to GRS1

2) When the upload is complete, the prompt for the next GRS upload is displayed, as seen in the following figure.

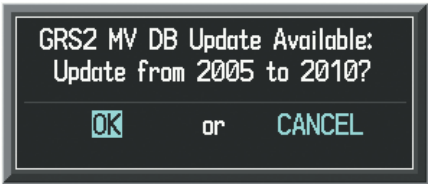

GRS2 Magnetic Field Variation Database Update Prompt

3) With 'OK' highlighted, press the **ENT** Key on the MFD. A progress monitor is displayed as shown in the following figure. When the upload is complete, the system is ready for use.

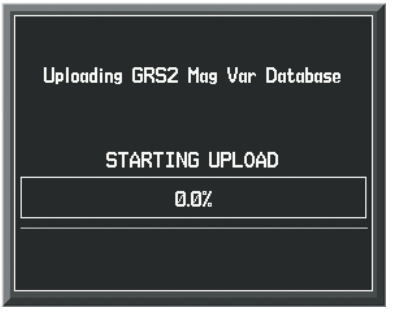

Uploading Database to GRS2

A

Activate a flight plan 22
Active Channel 59
Active database 109
Active Navigation Database 109
AC-U-KWIK 58
ADF 13, 14, 66, 102
Advisory alerts 72
AHRS 69, 91, 92
Airport Directory 58
Airport Signs 55, 56
Airways 106
AOPA 58
AOPA's Airport Directory 58
AP 73
Assist, engine leaning 10–12
Audio panel controls
NAV1, NAV2 14
Audio panel fail-safe operation 65
Autopilot 73
Auxiliary video 61

B

Barometric Altitude Minimums 3
Barometric pressure 103

C

Carbon monoxide detection 7
CDI 2, 14, 94
Cell 43, 44
Cell mode 44
Channel Presets 60
ChartView 56, 57
Checklists 63–64
Clearance player 15
Clearance Recorder 15
Code selection softkeys 13
COM 14, 15, 65
Cylinder Head Temperature (CHT °F) 5, 9

D

DB Mismatch 107, 110
DCLTR Softkey 56
Dead Reckoning 66
Declutter 66, 99, 106
Declutter EIS 9
Direct-to 21
DME 13, 14
DR mode 66, 67, 68

E

Edit a flight plan 36
Electronic checklists 63, 64
Emergency checklist 64
Enable Terrain 51
Endurance, calculated (ENDUR) 8
Engine leaning assist 10–12
Engine Manifold Pressure (MAN IN HG) 5, 6
Exhaust Gas Temperature (EGT °F) 5, 9, 10–11

F

Fail-safe operation 65
FD 73
Flight Director 17
Flight path marker 55
Flight plan import/export messages 97, 98
FliteCharts® 56, 57
Frequency Transfer 14
Fuel calculations 8

Fuel Flow (FFLOW GPH) 5, 6, 10
Fuel flow totalizer 8
Fuel quantity (FUEL QTY GAL) 5, 6
Fuel remaining 105
Fuel remaining, calculated (GAL REM) 8
Fuel used, calculated (GAL USED) 8

H

Horizon heading 55

I

Inhibit TAWS 53
Inhibit Terrain 51
Insertion Point Indicator 23, 33, 34, 38
Inset Map 99, 100
IOI 74, 76

J

Jeppesen 57

L

Lightning 43, 44, 106

M

Magnetic Field Variation Database 111
Map panning 45
Message advisories 78–96
MET 73
METAR 45
Minimums 78
Mistrim 73
MKR/MUTE 15
Mode S 104
Mode selection softkeys 13
Multi Function Display (MFD) Softkeys 105

N

NAV 14
NAV1 2, 14
NAV2 2, 14
Navigation database 23, 24
NEXRAD 45, 100, 106

O

OBS 2
Obstacles 82, 87
Oil Pressure (OIL PSI) 5, 6
Oil Temperature (OIL °F) 5, 6
Overspeed Protection 18
Oxygen Outlet Pressure (OXY OUTLET PSI) 6
Oxygen Quantity (OXY QTY PSI) 6

P

Pathways 55, 56
Power-up page 63
Profile View 106

R

Reversionary mode 65
ROC 74, 76

S

SafeTaxi® 56
Secure Digital (SD) card 63
Split COM operation 14
Standby Navigation Database 110
Store Flight Plan 35
Stormscope lightning data 43, 44, 106
Strike 43
Strike mode 44
SVS 55, 96

SVS Terrain 55
Synchronization 108
SYNC Status 110
Synthetic Vision System 55

T

TA 78
Tachometer (RPM) 5, 6
TAF 45
TAS 48, 78, 91
TAWS 52, 53, 75
Terrain 49, 50, 52, 82, 100, 106
Terrain-SVS 50, 51
Timer 93
Topographical data 100, 106
Traffic 43, 48, 105
Traffic advisory 48, 78
Traffic map page 48, 49, 50
Transponder 13, 104
Trim 5, 6
Turbine Inlet Temperature (TIT °F) 5, 12

V

Vertical speed guidance 24
Vertical track 78
Video 61
VNV 21, 66, 95
Vspeed 2

W

Waypoint Selection Submenu 32
Weather data link page 45
Wind data 102

X

XM lightning 100, 106
XM Radio 59
XM weather 45

Z

Zoom Window 62

Blank Page

Garmin International, Inc.
1200 East 151st Street
Olathe, KS 66062, U.S.A.
p: 913.397.8200 | f: 913.397.8282

Garmin AT, Inc.
2345 Turner Road SE
Salem, OR 97302, U.S.A.
p: 503.391.3411 | f: 503.364.2138

Garmin (Europe) Ltd
Liberty House, Bulls Copse Road
Hounsdown Business Park
Southampton, SO40 9RB, U.K.
p: 44/0870.8501241 | f: 44/0870.8501251

Garmin Corporation
No. 68, Jangshu 2nd Road
Shijr, Taipei County, Taiwan
p: 886/2.2642.9199 | f: 886/2.2642.9099

www.garmin.com

© 2006-2010, 2012 Garmin Ltd. or its subsidiaries

190-00567-05 Rev. A